

**DEALERS MUST TRANSLATE THEIR OWN LANGUAGE OF
MANUAL INSTRUCTIONS BELOW FOR YOUR MARKET
PLEASE READ THE INSTRUCTIONS
CAREFULLY BEFORE USE**



Styles and colors may vary

**Keep the package away from children and dispose of
properly before use**

Executive Standard: GB6675-2003,GB19865-2005,EN71-1-2-3

- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Vehicle needs a push to go forward	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery with not recharge	Battery connector adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charge is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

10.Maintaining

- It is parents’ responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.

1.Specification:

Battery	12V7AH*1
Fuse	15A
Charger	12V1000MA
Speed	4km/hr

Suitable age : 37-96 months

Load Capacity: Under 30KGS

Size of car: 116*68*79.5CM


Power way: Charging type

Charge time : 8-12 hours

2.Packing list:

Number	NAME	QUANTITY
1	seat	1
2	steering wheel	1
3	wheel	4
4	wheel cap	4
5	nut cap	1
6	Front bumper	1
7	Steering rod	1
8	Searchlight	1
9	Storage box	1
10	wind shield	1
11	Mirror	1
12	Charger	1
13	Remote control	1
14	Spanner	2
15	Connecting parts	2
A	Ø12 gaskets	4-6
B	M10 nut	4-5
C	M5*37 screw	1
D	M5 nut	1
E	Ø4×10 screw	23-24

if the car with EVA wheel ,than the quantity of Ø4×10 screw is 35

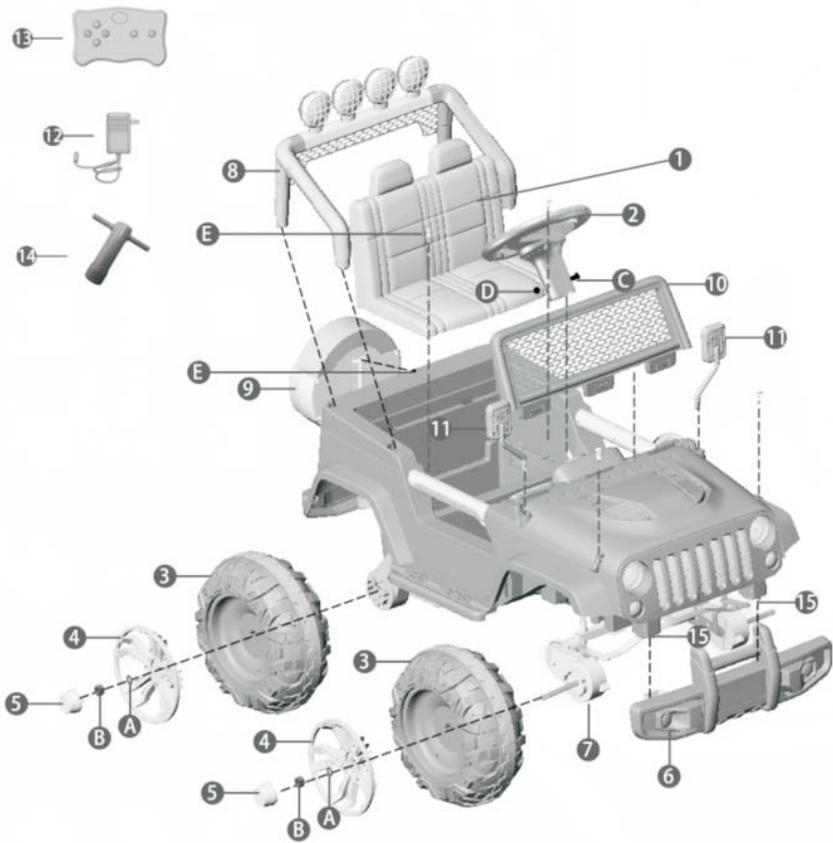

WARNING!

FOR THE SAFETY OF YOUR CHILD , PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS.KEEP THIS GUIDE FOR FUTURE REFERENCE.

- ADULT ASSEMBLY REQUIRED. The product contains small parts, which are for adult assembly only. Keep children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.
- Make sure that the power switch is turned “OF” before assembling the ride on car.

Assembly tools required:



Screwdriver



Spanner

illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as local automotive battery retailer.

Do not throw the battery away with your regular household waste!

7. Replace the battery and reconnect the connectors.
8. Replace the metal battery bracket.
9. Replace the seat.

10. Troubleshooting Guide

Problem	Possible Cause	Solution
Vehicle dose not run	Battery low on power	Recharge battery
	Fuse has broken	Replace,see<Fuse>
	Battery connector or wires are loose	Check that battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please
	Battery is dead	Replace battery , contact your distributor please
	Electrical system is damaged	Contact your distributor please
	Motor is damaged	Contact your distributor please
Vehicle dose not run very long	Batter is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Recharge battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle. Maximum user weight is 30 kgs.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see<safety>

To avoid losing power , follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquid to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short , causing the fuse to trip.

Battery Replacement and Disposal


The battery will eventually lose the ability to hold a charge . Depending on the amount of use , and varying conditions, the battery should operate for one to three years. Follow these steps to replace and dispose the battery:

1. Open car bonnet.
2. Disconnect the battery connectors.
3. Remove the metal battery bracket.
4. Remove the battery cover
5. Carefully lift the battery
 - Depending on the condition of the battery (i.e.: leakage) you may want to wear protective gloves before removal.
 - Do not lift the battery by its connectors or cables
6. Place the dead battery in a plastic bag.

Important! Recycle the dead battery responsibly. The battery contain lead(electrolyte) and must be disposed of properly and legally. It is

3.Operation Instruction:


(A)

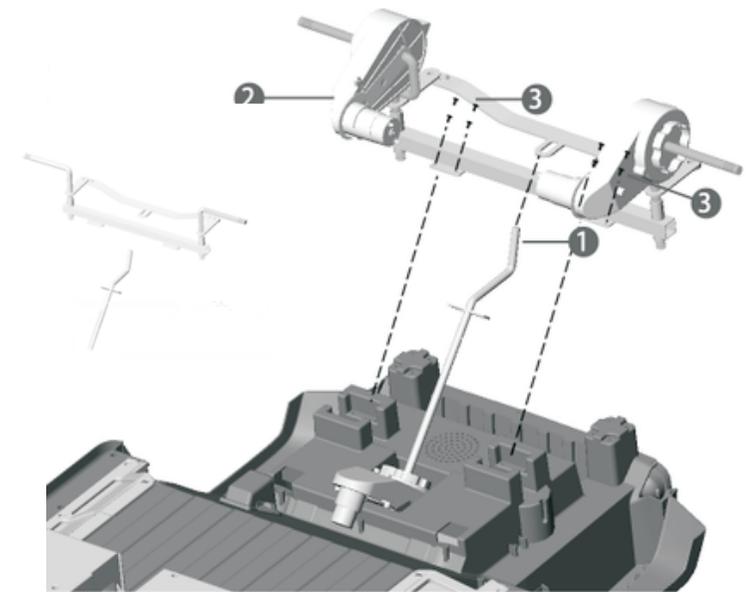

1. Insert the steering rod into the hole of the steering frame.
2. Insert the steering frame with motors to groove
3. Fixed it with screw $\varnothing 4 \times 10$

PS: The car with 2motors no front drive motor

(B)

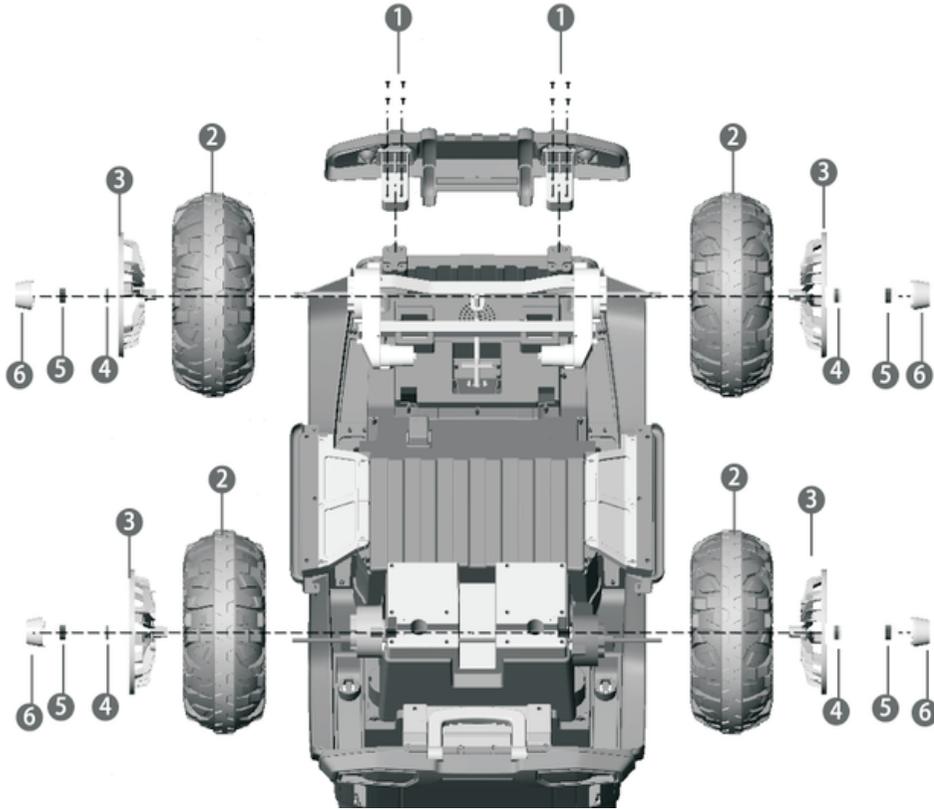

- 1.Fixed the Front bumper with screw $\varnothing 4 \times 10$ to the frame of the car
- 2.Install the four wheels
3. Install the wheel cap onto the wheel
- 4.Put the $\varnothing 12$ gaskets to the axle
- 5.Use spanner to fix the wheel with M10 nut
- 6.Put on the nut cap

When install the car with plastic wheels, pls choose the wheel without the wheel connect parts. put gasket $\varnothing 12$ on the axle. Then install the car according step 2-6. (When install the car with EVA wheels,pls add 3 screw of $\varnothing 4 \times 10$,put it on each axle)



In order to prevent the wheels from loosening, you can put more gaskets

NEVER pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case ONLY.
- Charge the battery in a dry area ONLY.

- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**
- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside case electric shock.. Only adults may handle or charge the batter. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with bracket, Battery can fall out and injure a child if vehicle tips over.
- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge times as 8 to 12 hours, less than 20 hours at most.

8.Battery Replacement

Operation Manual : For the first time to use (Or Replace the battery)Need to frequency bind

- Take out the remote control, install the battery
 - Long press on the frequency key 2-4 seconds, Low speed LED light flashing
 - Turn on the power of the car, Low speed LED light keep flashing to long lighting, then frequency bind succeed
 - If the frequency bind failed (Low speed LED light flashing) , remove the battery and repeat steps 1~3
 - remote control without operation after 10 seconds, indication light will off into power saving mode
 - Button Description: \triangle forward ∇ backward \triangleleft turn left \triangleright turn right
- S: Speed , P: emergency brake, Press it and the running function will fail, press again, it release

7.Charging


ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

WARNING!


- **PREVENT FIRE AND ELECTRIC SHOCK:**

- Use the only rechargeable batter and charger supplied with your vehicle. NEVER substitute the battery or charger with another brand. Using another battery or charger my cause a fire or explosion.
- Do not use the battery or charger for any other product. Overheating, fire or explosion could occur.
- NEVER modify the electric circuit system.. Tampering with the electric system may cause a shock, fire or explosion or my permanently damage the system.
- Do not allow direct contact between battery terminals. Fire or explosion can occur.
- Do not allow any type of liquid on the batter or its components.
- Explosive gasses are created during charging. Do not charge near or flammable materials. Charge the battery in a well-ventilated area ONLY.

(C)

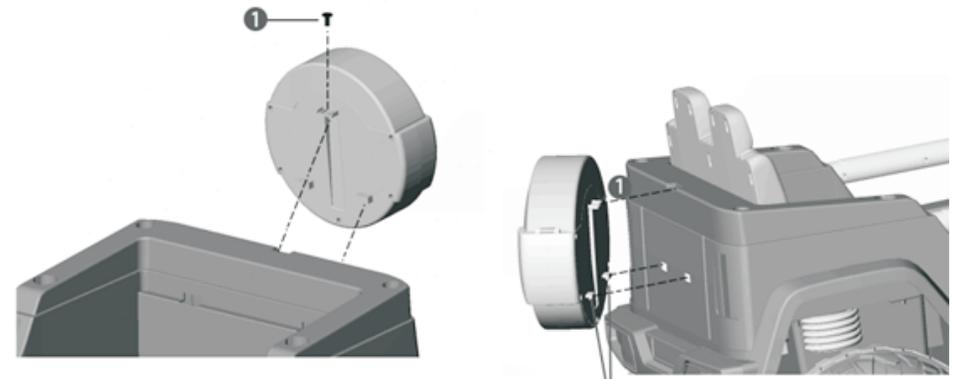


1. Install the Storage box, and fix it with $\varnothing 4 \times 10$ screw

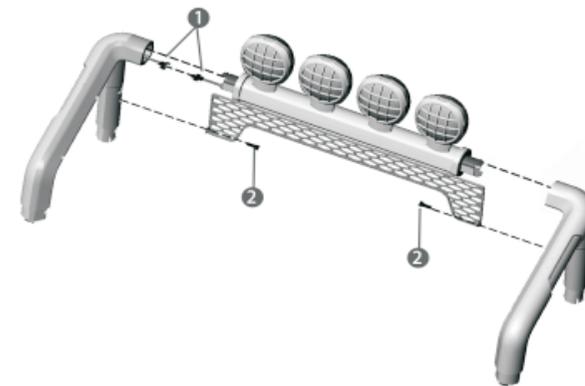


1. Connect the light wire of the Bracket ,and fixed it
2. Fixed the Bracket with screw $\varnothing 4 \times 10$
3. Connect the light wire between Bracket and the frame of the car
4. Fixed the Bracket to the frame of the car

(D)

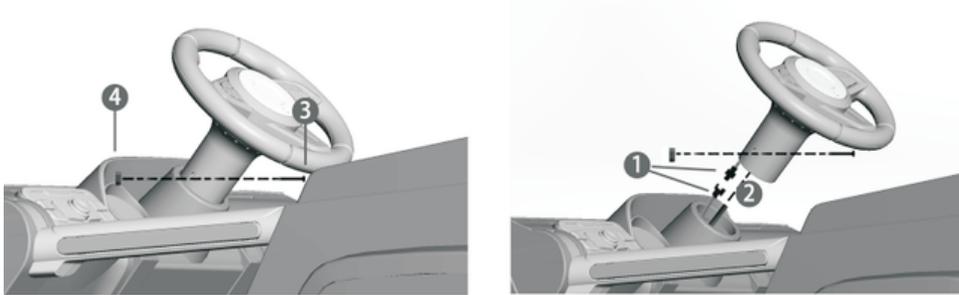

1. Connect the music wire to the steering Wheel
2. Install the steering wheel on the steering shaft
3. fixed it with screw M5×37
4. Put on the nut M5

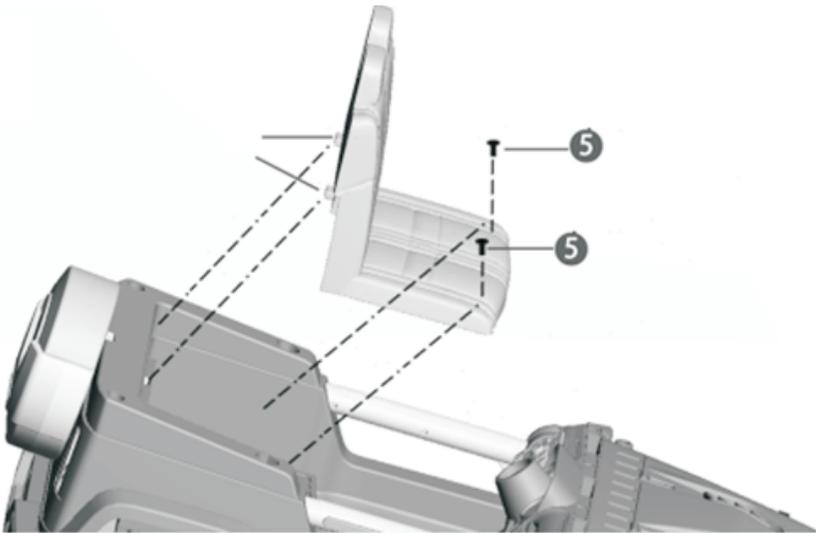


5. fixed the seat with the 2* $\varnothing 4 \times 10$ screws

WARNING!

This product with CHARGING PROTECTION : When charging, all the functions will be cut off!

6. Use The Remote Controller

**NOTE: This product does not included the AA(1.5v)
Only allow adult to use remote control, can not let the children touch**

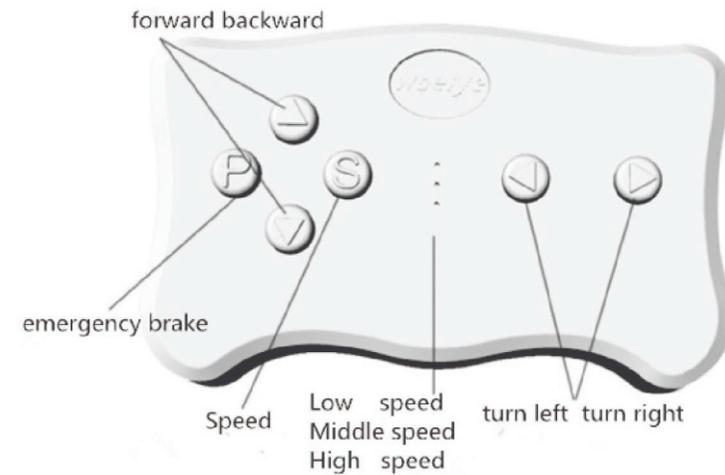

Must confirm before using that following work which is already finished:
Important! Before using the vehicle for the first time, the battery needs to be charged for 4 to 6 hours , no more than 10 hours. Only an adult can charge and recharge the battery.

Check all the screws, cap nuts and protective coverings regularly and tighten as required.

Rules for Safe Riding

- Keep Children within safe riding areas:

Never use in roadway, near motor vehicles, on lawn space , on or near steep inclines or steps swimming pools or other bodies of water;

- Use the toy only on flat surfaces. Such as inside your house, garden or playground


- Never use in the dark . A child could encounter unexpected obstacles and have an accident. Operate the vehicles only in the daytime or well-lit area.

- It is prohibited to change the circuit or add other electric parts.


- Inspect wires and connections of the vehicle periodically

- Do not let any child touch the wheels or be near them when the car is moving.

(E)

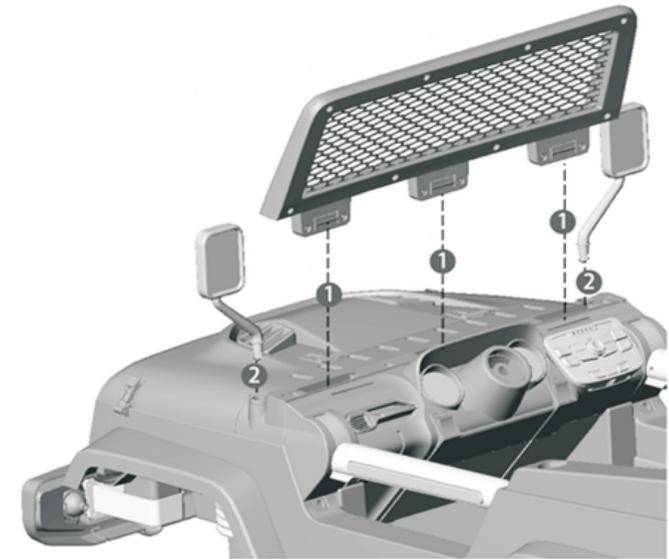


1. Put the wind shield into the frame and fixed it
2. Fixed the view mirror to left and right side of the frame

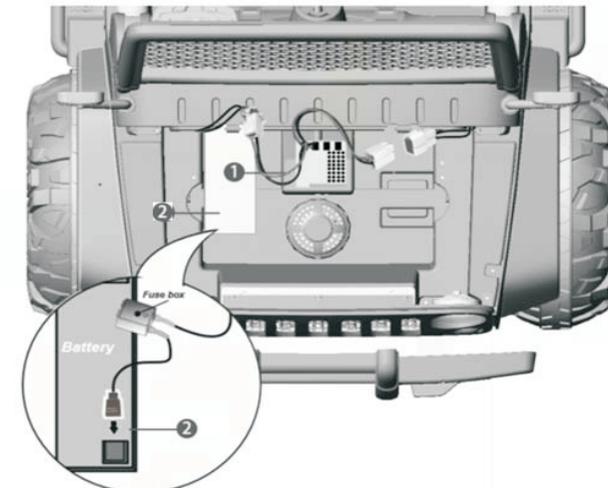

1. Connect the wire of the receiver and motors
2. Open the cushion and insert wires into the socket
Red to red , black to black

(F)

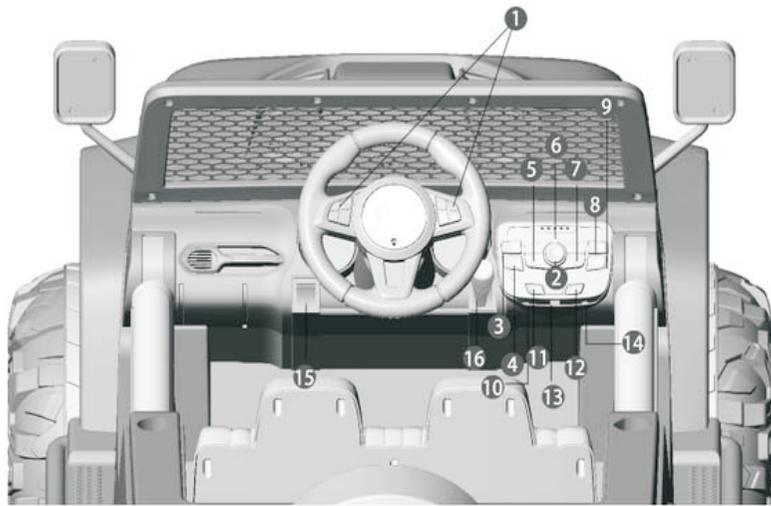

1. Sounds button: Press it for sounds or music playing
2. Power button: turn the vehicle on and off
3. Last song ; Switch songs ,and long press will increase Volume
4. Next Song: Switch songs, and long press will decrease Volume
5. Stop play button: press the button to open the music music or stop
6. Power display: Clearly see the battery power, in order to charge in time
- 7 Music button: Play Music
- 8.ABC/Bluetooth Speaker: press the button ,content the mobile phones and bluetooth , then the car can play music and calls
- 9.FM: Tell Story or Music/ Radio
- 10 .MP3 Slot
- 11 No Use
12. Light button : turn on or off the light
13. Socket: Charge
14. TF Slot
15. No Use
16. shift switch :Changes the direction the vehicle moves from forward tobackward

4.Safety

WARNING!

PREVENT INJURIES AND DEATHS

- NEVER LEAVE CHILD UNATTENDED .DIRECT ADULT SUPERISION IS REQUIRED
Always keep child in view when child is in vehicle
- This toy should be used with caution since skill is require to avoid falls or collisions causing injury to the user or third parties
- Protective equipment should be worn
- Never use in roadways, near cars , on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes
- Always sit on the seat
- Not to be used in traffic
- This toy is unsuitable for children under 37 months due to it maximum speed ; Maximum user weight is 30kg