



## PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

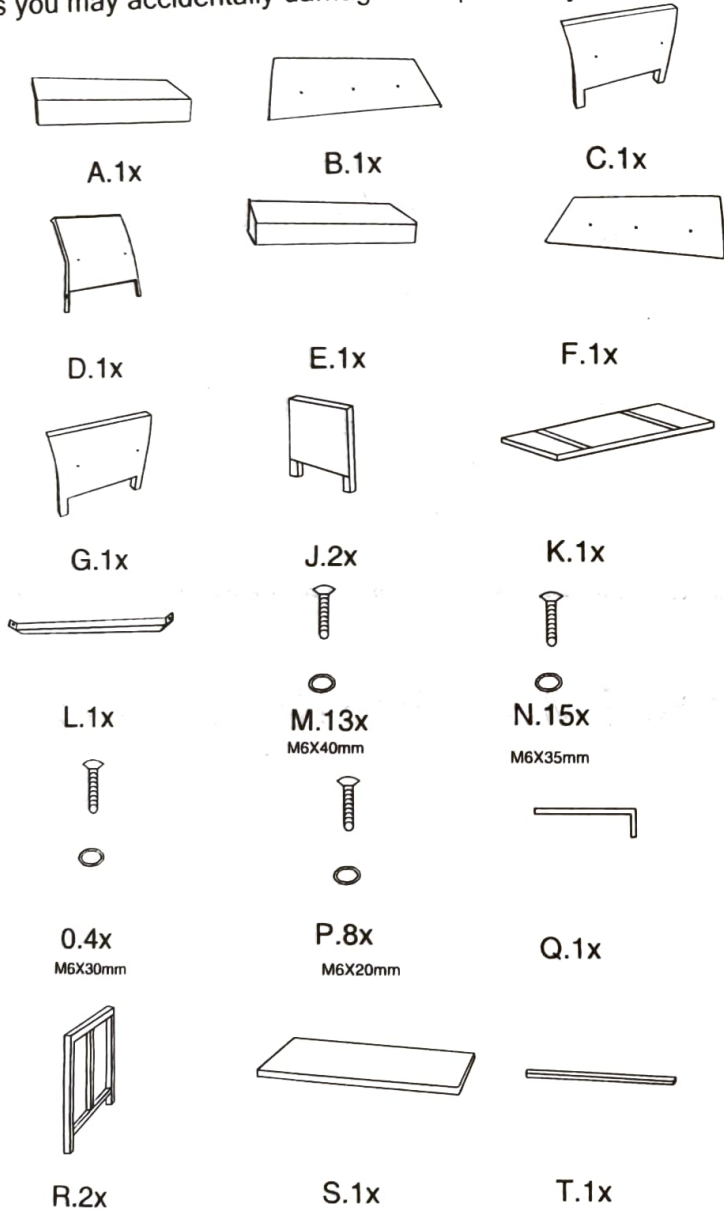


Do not fully tighten bolts until assembly is complete.


## 3seat corner sofa

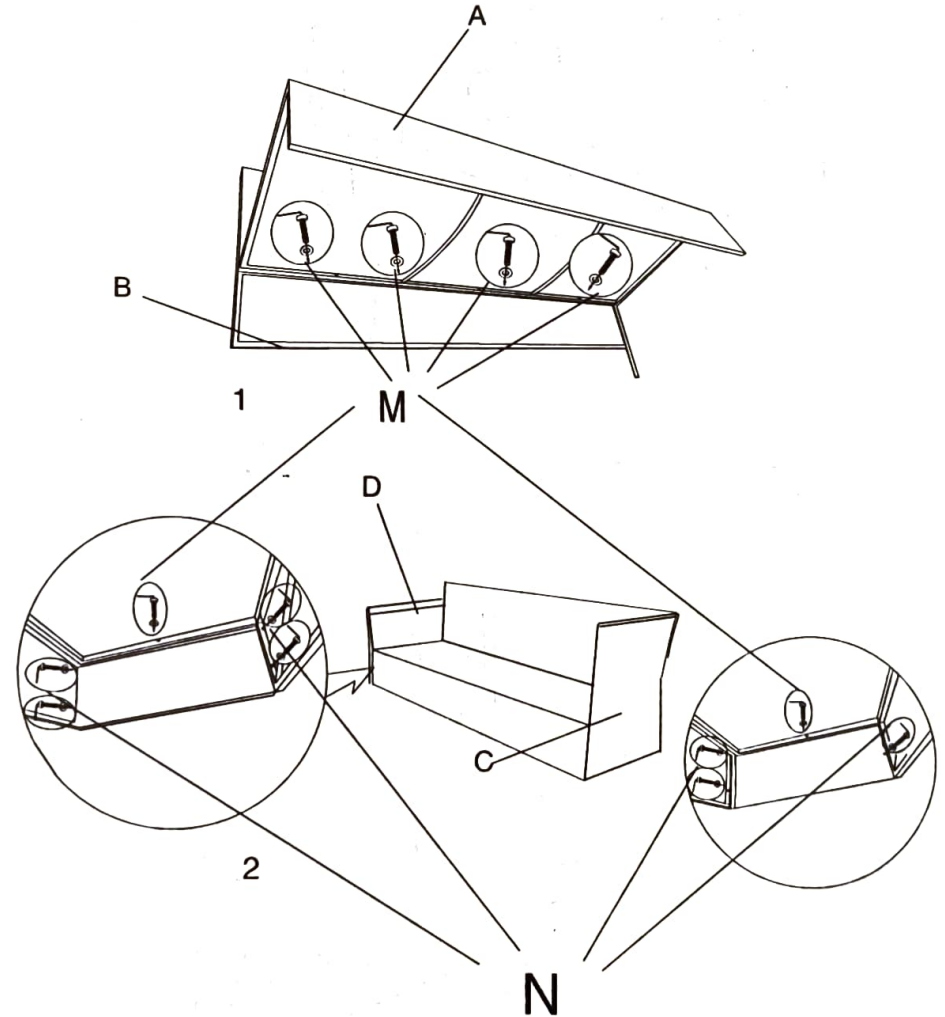

### 3seat sofa

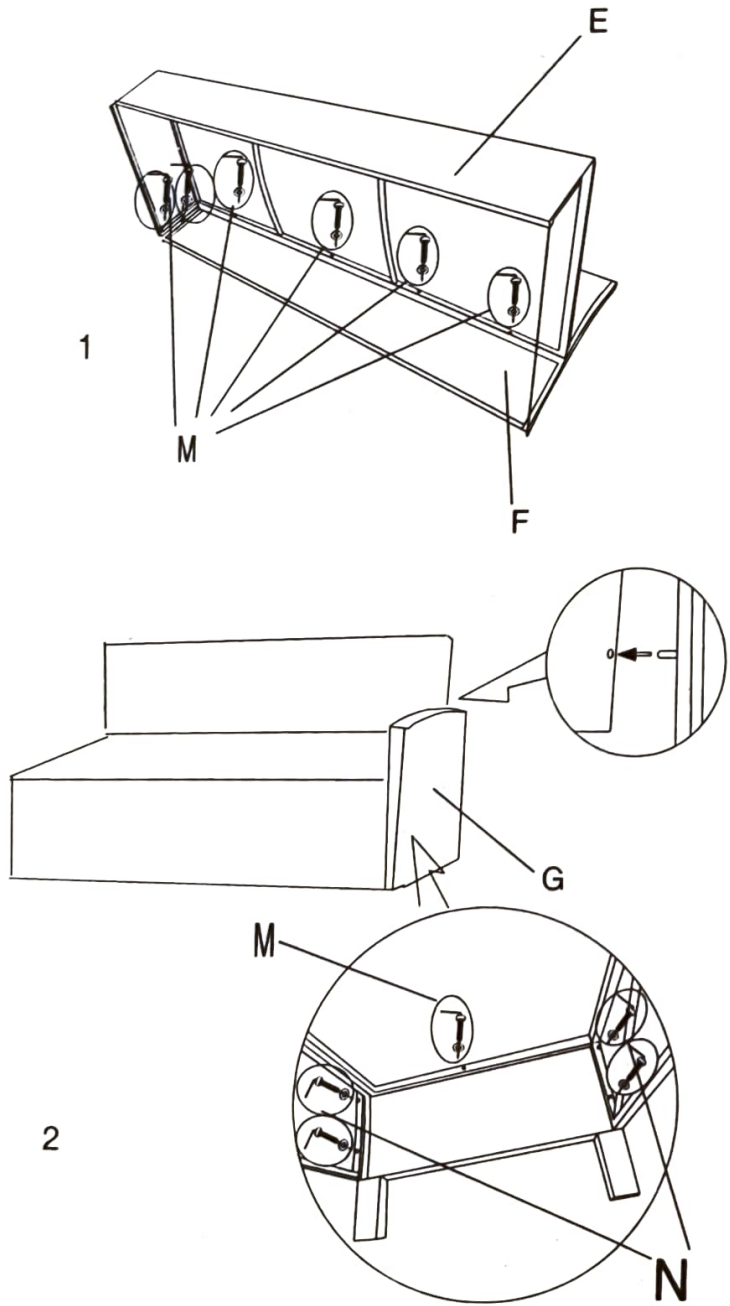

### Dining table

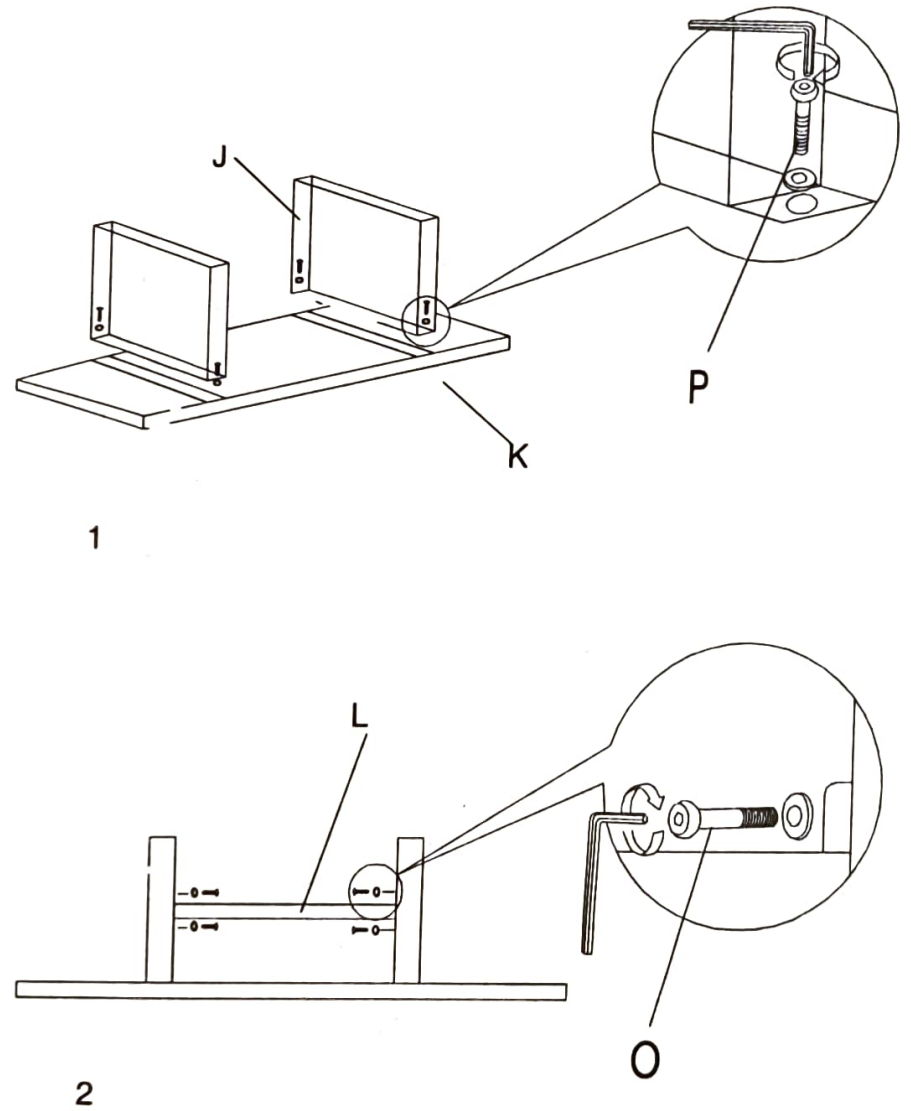

# Bench

