

AIR CIRCULATION FAN

USER MANUAL

MFS300RADHH

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	05
PRODUCT OVERVIEW	06
PRODUCT INSTALLATION	07
OPERATION INSTRUCTIONS	09
CLEANING AND MAINTENANCE	12
TROUBLESHOOTING	13
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	14
DATA PROTECTION NOTICE	15

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols



Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

- Read Rules for Safe Operation and Instructions Carefully.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- DO NOT use fan in window, rain may create electrical hazard.
- Indoor use only.

⚠ WARNING


- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
- Indoor and household use only.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
 - Prior cleaning unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

SPECIFICATIONS

Product Model	MFS300RADHH
Voltage	220-240V-
Frequency	50Hz
Power	35W

PRODUCT OVERVIEW

Part Name

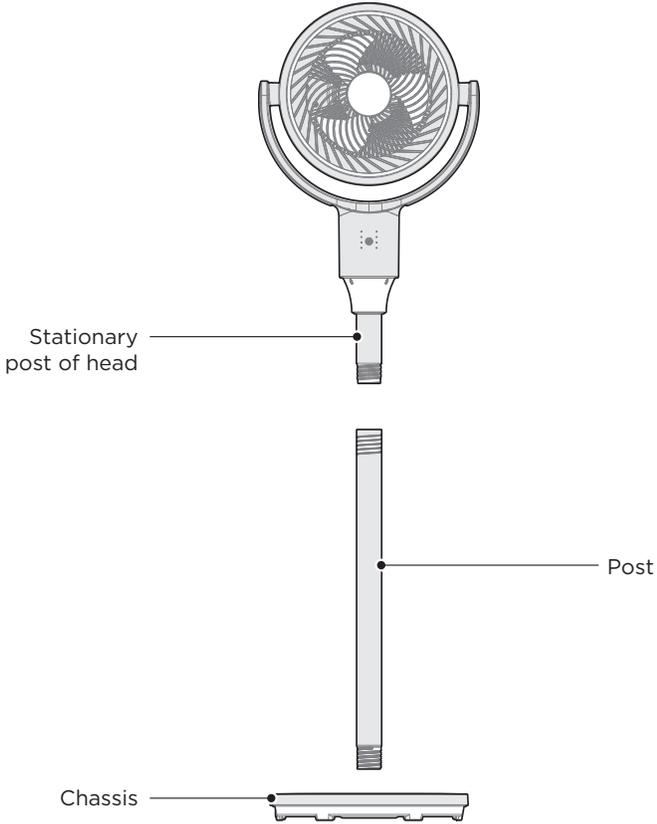


NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

PRODUCT INSTALLATION


Post Mounting

Align the post and the base interface, and rotate clockwise to tighten it.

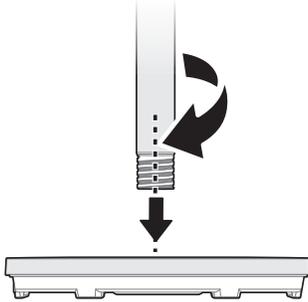


Stationary Post Mounting

Align the stationary post with the post interface and insert, then rotate clockwise and tighten it.

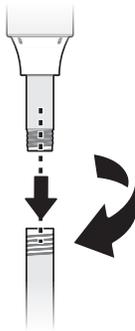

Add Aromatherapy Oil

Rotate the aroma diffuser cover in the center of the front grille counterclockwise to open it, drop the essential oil (floral water) on the cotton sheet in the center of the front grille, then align the aroma diffuser cover and press lightly. After assembling according to the alignment mark, tighten it clockwise.

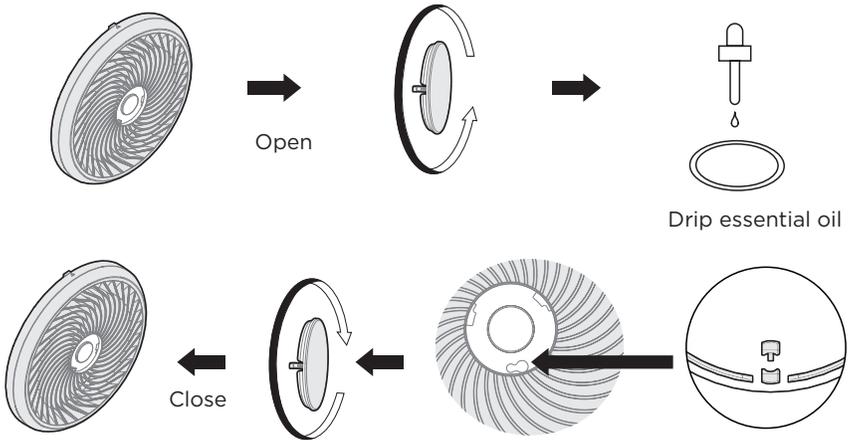


When assembling, first insert the large round hole according to the alignment mark, and then rotate clockwise

NOTE

This product does not come with essential oil. It needs to be purchased separately.

OPERATION INSTRUCTIONS


Description of Buttons

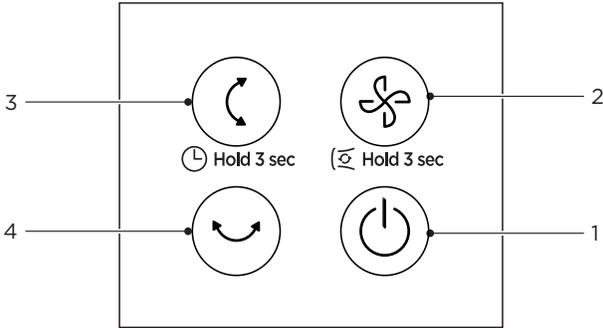

No	Button	Function description
1	 On/Standby button	<ul style="list-style-type: none"> Press this button to start or stop the fan.
2	 Wind speed button (wind type)	<ul style="list-style-type: none"> When the fan is running, press this button to switch the fan speed in the sequence of low-medium-high-low...; the corresponding level indicator light turns on. When the fan is running, press and hold this button to enter the circulating air, and hold it again to exit the circulating air.
3	 Up/down oscillator button (timer)	<ul style="list-style-type: none"> In the power-on state, press this button to turn on/off the up/down oscillator. In the power-on state, press and hold this button to enter the timer adjustment, continue to press it to switch in the following sequence: 1h, 2h, 3h, 4h (1h and 3h indicators turn on at the same time), 5h (2h and 3h indicators turn on at the same time), 6h (1h, 2h and 3h indicators turn on at the same time), off; the setting is confirmed if there is no operation for 3 seconds. In standby mode, press and hold this button to set scheduled power-on; continue to press it to switch in the following sequence: 1h, 2h, 3h, 4h (1h and 3h indicators turn on at the same time), 5h (2h and 3h indicators turn on at the same time), 6h (1h, 2h and 3h indicators turn on at the same time), off; the setting is confirmed if there is no operation for 3 seconds.


No	Button	Function description
4	 Left/right oscillator button	<ul style="list-style-type: none"> In the power-on state, press this button to turn on/off the left/right oscillator.
Other function description		<ul style="list-style-type: none"> After plugging in the power and entering the power-on state, if there is no operation on the machine, it will automatically shut down after 15 hours


Display Panel Description

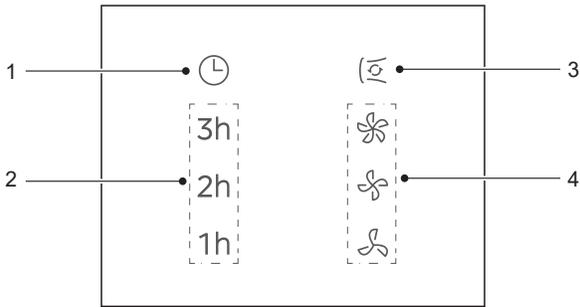

No	ICON	Function description
1	⌚	<ul style="list-style-type: none"> Timer function indicator.
2	3h 2h 1h	<ul style="list-style-type: none"> Schedule time indicator.
3	⌚	<ul style="list-style-type: none"> Circulating air indicator.
4	  	<ul style="list-style-type: none"> High speed indicator. Medium speed indicator. Low speed indicator.

Description of Remote Control Buttons

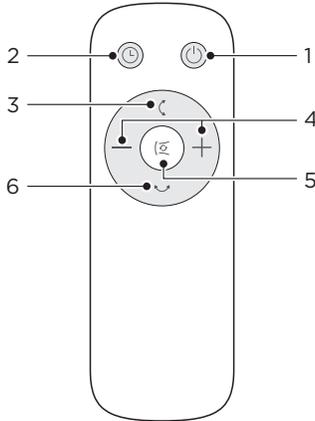

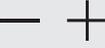No	Button	Function description
1		<ul style="list-style-type: none"> • On/standby.
2		<ul style="list-style-type: none"> • Directly touch to set the schedule on/off time.
3		<ul style="list-style-type: none"> • Turn on/off up/down oscillator.
4		<ul style="list-style-type: none"> • Directly touch to increase or decrease the wind speed; when the timer light is flashing, the schedule time can be increased or decreased.
5		<ul style="list-style-type: none"> • Turn on/off circulating air.
6		<ul style="list-style-type: none"> • Turn on/off left/right oscillator.

NOTE

- The remote control can be used normally within 5 meters from the front of the product, and the deviation angle is within 30 degrees.
- Batteries contain many heavy metals and acid-base substances, which threaten human health; used batteries should be recycled separately.
- Battery for the remote control: AAA 1.5V.

CLEANING AND MAINTENANCE

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.
6. Be sure to unplug from the electrical supply source before cleaning.
7. Plastic parts should be cleaned with a soft cloth moisten with mild soap.
Thoroughly remove soap film with dry cloth.

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The machine does not work properly after installed	• The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	• The switch on the body is not turned on.	Turn on the switch on the body.
The remote does not work	• The battery needs replacing.	Replace the battery.
	• The remote is being used more than 5m away from the fan.	Use the remote closer to the fan and make sure it is pointing directly at the display panel.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.