

重点 校对项

1. 版面尺寸

2. 材质标注

3. 物料编码

4. 颜色标注

5. 客户型号

6. 产品名称

7. 重量标注

8. 电压功率

9. 说明书装订要求

10. 警语/认证标志高度

11. 档位、控制面板一致性


1	2	3	4	5	6
项目					
库					
文件名					



OWNER'S MANUAL

Stand Fan

MODEL:FS40-19K

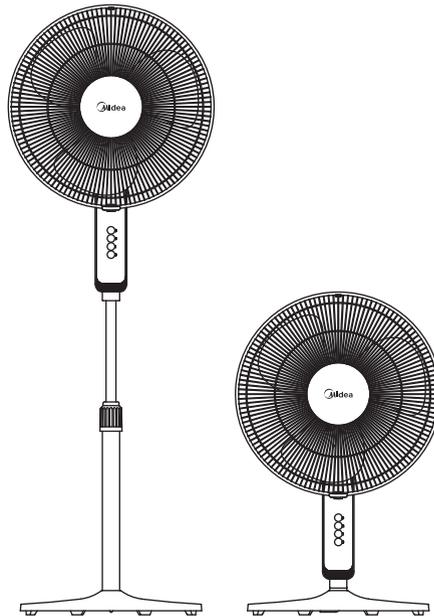

READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the IM are for reference only.

封面

技术要求(版本号:B, 2020-01)

1. 文字图案印刷颜色为：单色，印刷字体需清晰可见，文字不能粘到一起；
2. 该说明书的幅面大小为：A5，未注直线尺寸公差应符合GB/T1804-v；
3. 该说明书的装订方式为：钉装；[70P以下为钉装，70P以上为胶装（特殊要求除外）]
4. 说明书警语及认证标志应满足CE/UL标准，CE：警语部分大写字母高度不低于3mm，CE标志不低于5mm，WEEE标志不低于7mm；UL：大写字母字高不小于1/12”（2.11mm），小写字母字高不小于1/16”（1.6mm），“IMPORTANT SAFEGUARDS”，“SAVE THESE INSTRUCTIONS”等词，其字高不小于3/16”（4.8mm），IMPORTANT SAFEGUARDS 必须在最前面。
5. 产品应符合QMG-J53.021《产品说明书技术条件》的有关要求。
6. 有ROHS指令要求的物料应符合美的企业标准QML-J11.006《产品中限制使用有害物质的技术标准》。

16161000A17458

				电风扇		说明书 MIDEA-FS40-19K (FS40-19K)-0502 RoHS 单黑 钉装 145x210mm 4张8页 80g双胶纸 双面印刷 竖版 电风扇	
				说明书			
增加	田龙飞	22.8.17					
标记	处数	更改文件号	签字	日期			
制图	颜雅丽	审核	李艳	图样标记		重量	比例
设计	-----	标准化	李海棣	K	/		1:1
校对	-----	审定	古广君	共 1 页		第 1 页	
会签	-----	日期	2021-06-24				
				广东美的生活电器制造有限公司			


1	2	3	4	5	6
---	---	---	---	---	---



OWNER'S MANUAL

Stand Fan

MODEL:FS40-19K

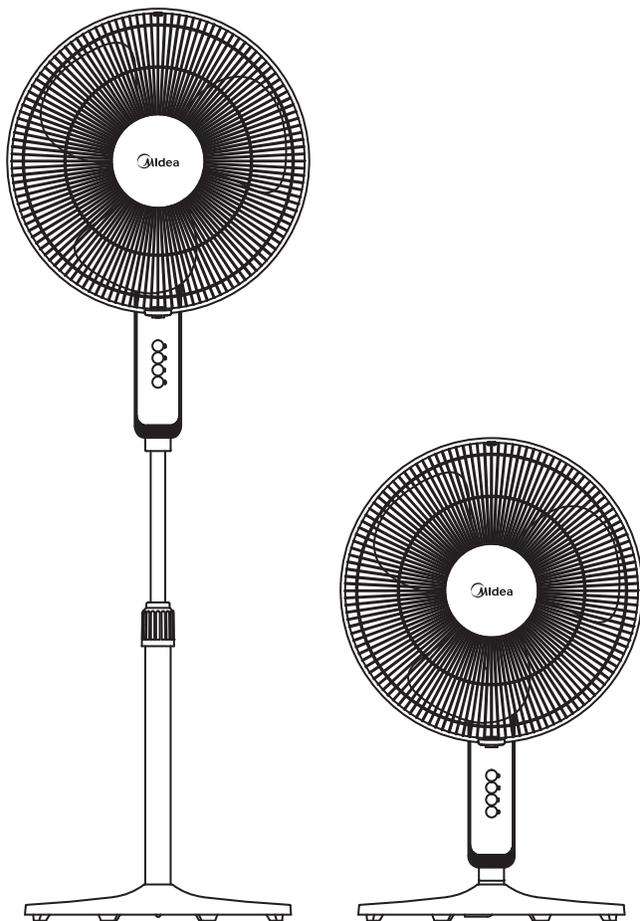

READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the IM are for reference only.

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. Indoor use only.
3. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
5. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
6. When the fan was assembled, the rotor blade guard shall not be taken off anymore.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. DO NOT use fan in window, rain may create electrical hazard.
5. Household use only.

INSTALLATION INSTRUCTIONS

Name of components



Considerate Hint:

If you choose to install the pole, it will become the Stand Fan.

If you choose to install the connector, it will become the Table Fan.


Base Installation

Align the column with the groove on the base and fix them together using a right-angle bolt.

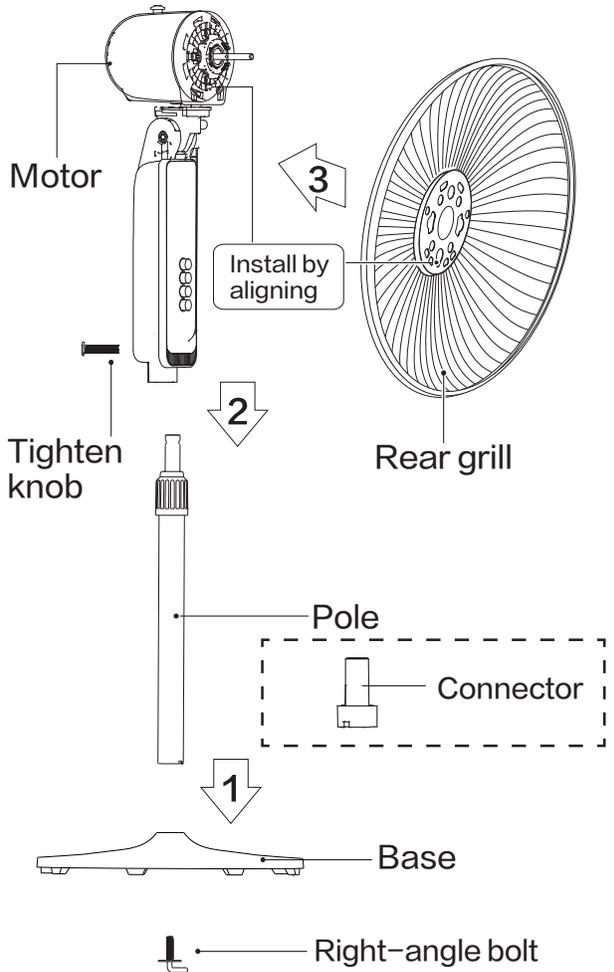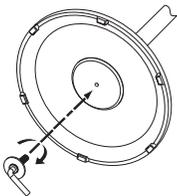


Front and Rear Guard Installation



Align Catch of the Front Guard with the illustrated position of the Rear Guard.

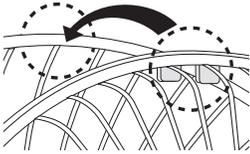

Press guards sequentially with both hands.

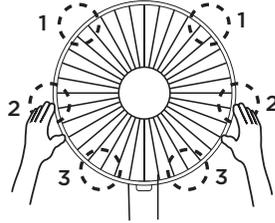

Self-Catch Installation.

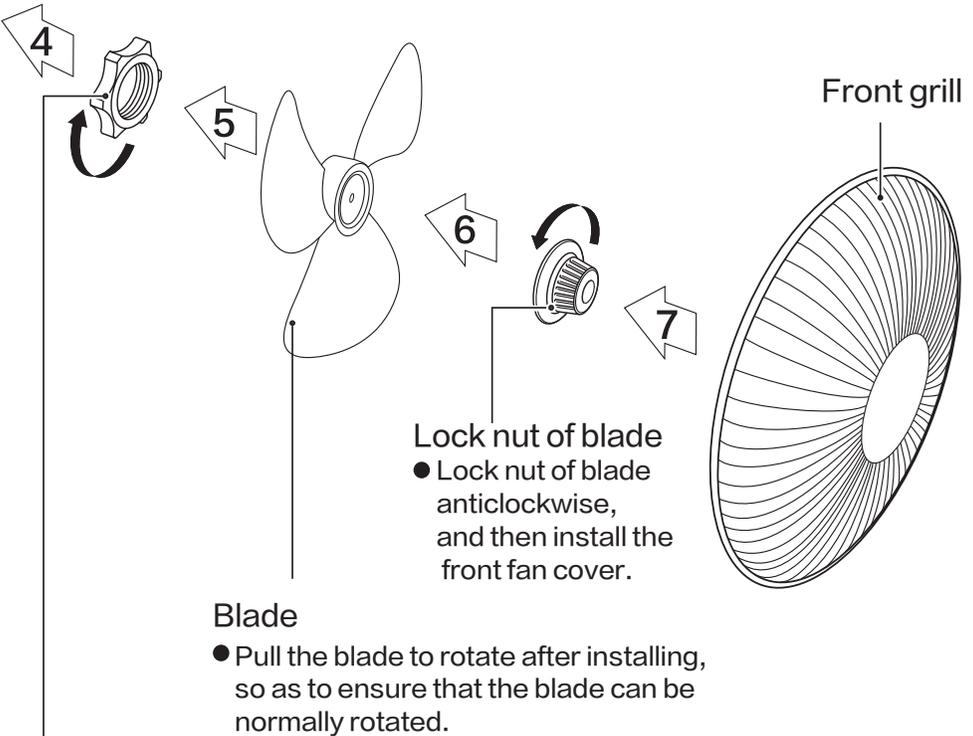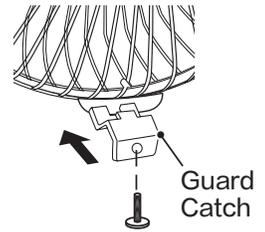


Lock nut of grill

- Screw the lock nut of grill clockwise, and in the meantime, fix the rear grill.

INSTRUCTIONS FOR USE

■ Instructions for operation of body

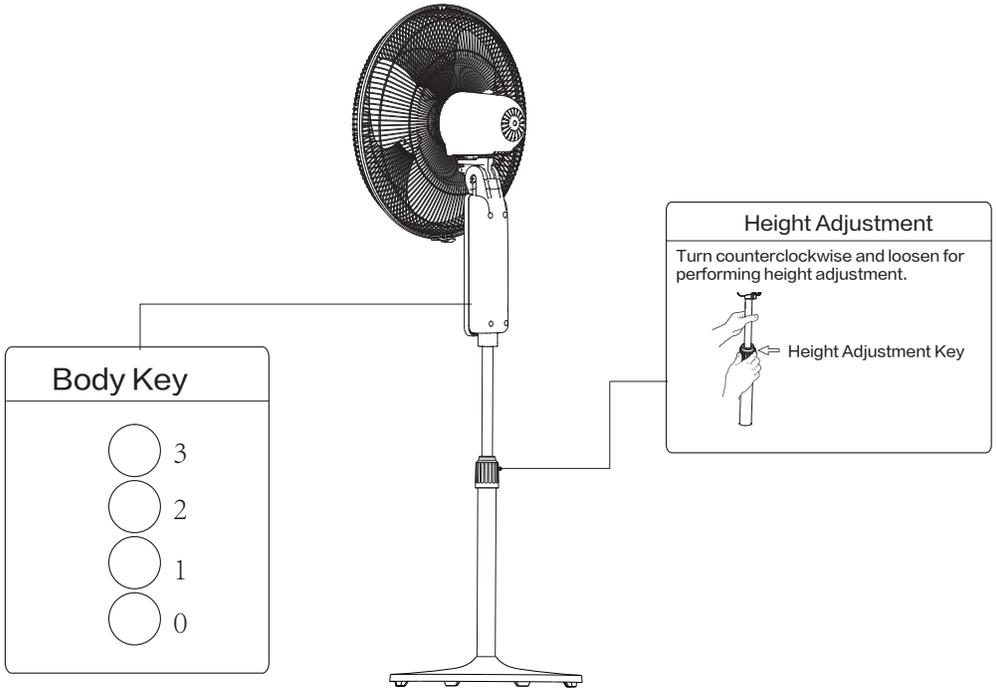

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

Dealer Stamp	Warranty Details Changes to Warranty card invalidates the warranty		
	Model No.	Product:	
	Serial No.	Date of expiry of warranty:	
	Customer Details To be filled in upon purchase		
	Customers Name&Address	Date of purchase	
	Tel.No./Email		
	Service History To be filled in case of warranty repair		
	Job no.	Date	Job no.
			Date
			Job no.
			Date

Midea offers the owner of this product a ONE YEAR WARRANTY, from the date of purchase, against all manufacturing defects in material and workmanship. The warranty card to be presented to authorized service centers / distributors along with the purchase invoice to claim the warranty.

The warranty does not cover;

- 1) Damage due to mishandling or fire and becomes invalid if repair has been attempted by unauthorized persons.
- 2) Any failure to follow the instructions as mentioned in the user manual.
- 3) Fluctuation in voltage or any modifications/adjustments made to comply with local electrical, safety and technical standards.
- 4) Damages caused by fire, accident or any natural disaster, damage due to mishandling, wear & tear, voltage fluctuations.

Proudly Distributed in Fiji By ELECTOMECH PTE LIMITED

Lot 2, Kings Road Yalalevu, Ba, Fiji Islands

PH:(679)667 0049 FAX:(679)667 3200

E-mail:sales@electomech.com