

**ELECTRIC FAN**

# **USER MANUAL**

**FS40-19PRD**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

## THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

# CONTENTS

<b>THANK YOU LETTER</b>	01
<b>SAFETY INSTRUCTIONS</b>	02
<b>SPECIFICATIONS</b>	04
<b>PRODUCT OVERVIEW</b>	05
<b>PRODUCT INSTALLATION</b>	06
<b>OPERATION INSTRUCTIONS</b>	09
<b>CLEANING AND MAINTENANCE</b>	11
<b>TROUBLESHOOTING</b>	12
<b>TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT</b>	13
<b>DATA PROTECTION NOTICE</b>	14

# SAFETY INSTRUCTIONS

## Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

## Explanation of Symbols



### Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



### Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



### Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



### Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



### Attention

The signal word indicates important information (e.g. damage to property), but not danger.



### Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

## CAUTION

- Read Rules for Safe Operation and Instructions Carefully.
- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- DO NOT use fan in window, rain may create electrical hazard.
- Household use only.

## WARNING

- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Indoor use only.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.


# SPECIFICATIONS

<b>Product Model</b>	<b>FS40-19PRD</b>
Voltage	220-240V-
Frequency	50Hz
Rated Power	35W

---

# PRODUCT OVERVIEW

## Part Name

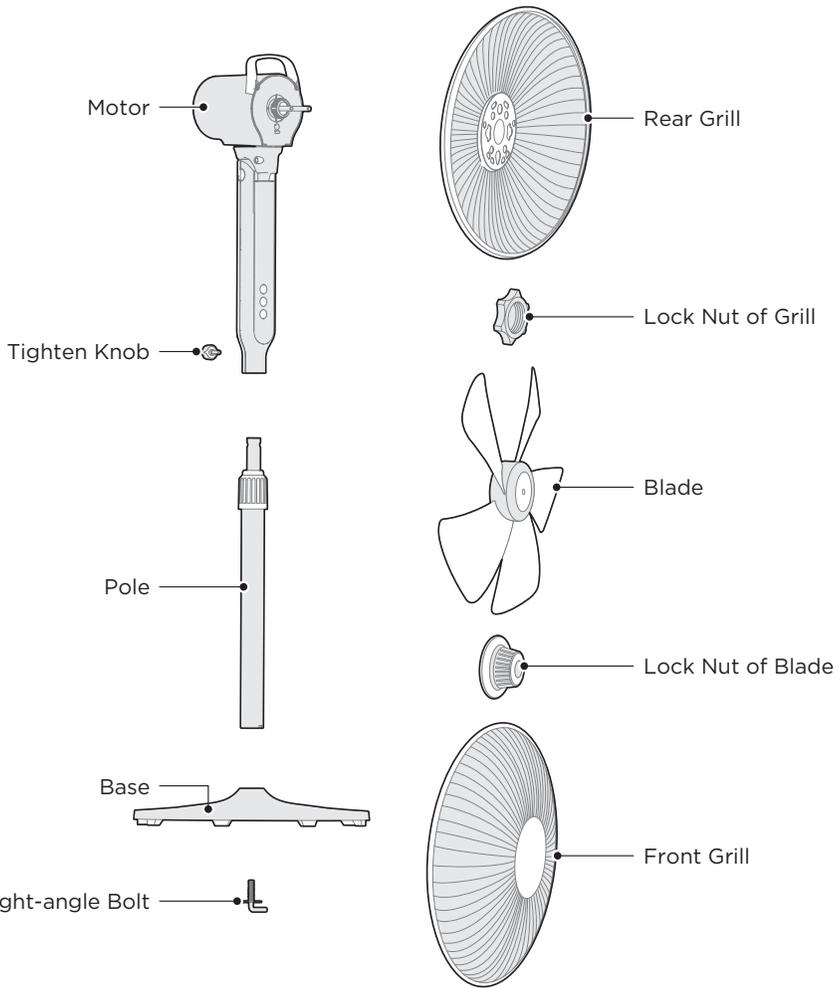

**NOTE**

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.


# PRODUCT INSTALLATION

## Installation Procedures

### 1 Install the base


Align the column with the groove on the base and fix them together using a right-angle bolt.

Considerate Hint: Remove parts from the component before performing installation.

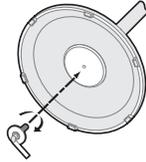


### 2 Install the base

2.1 Pull out and fix the inner column tube by adjusting the height adjustment knob (height can be adjusted as required).

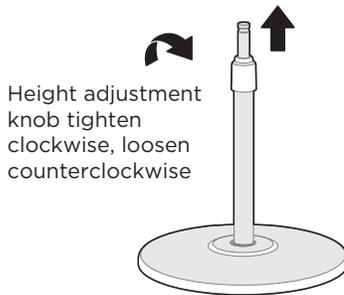

Height adjustment knob tighten clockwise, loosen counterclockwise

2.2 Install and fix the device by adjusting the tightening screw.

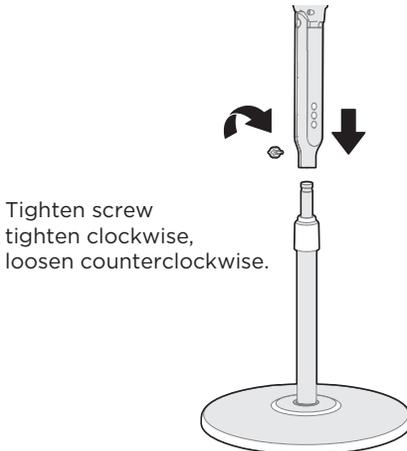


Tighten screw tighten clockwise, loosen counterclockwise.

### 3 Rear guard installation


3.1 Please unscrew the guard lock nut counterclockwise first.

3.2 Align the front cover of the motor and the rear grille, hang them and lock with the guard lock nut.

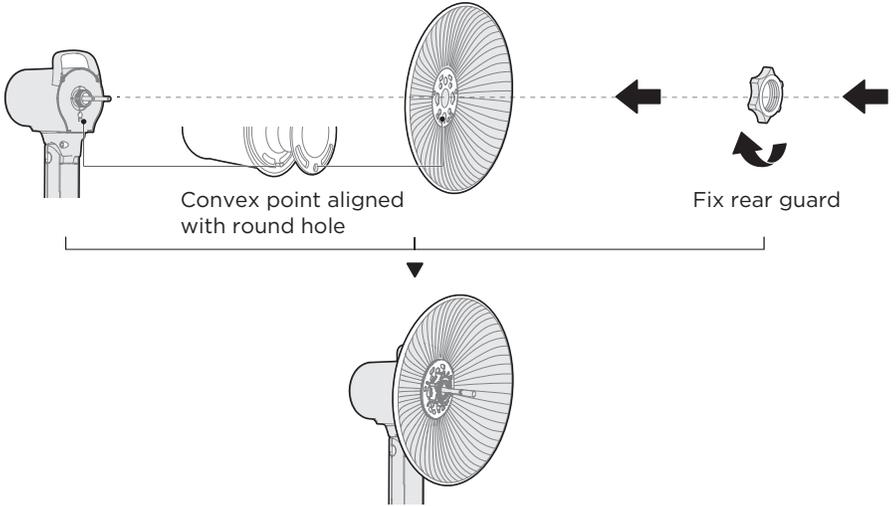


### 4 Blade installation

Fix rear guard with convex point aligned with round hole.

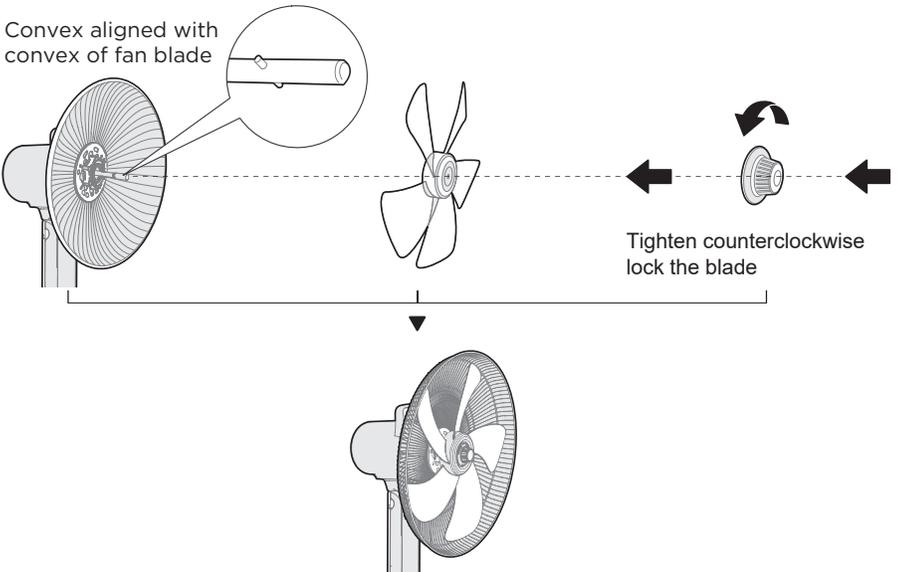


## 5 Front Guard Installation


5.1 Align catch of the front guard with the illustrated position of the rear guard.

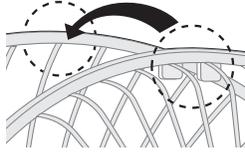

5.2 Press guards sequentially with both hands.

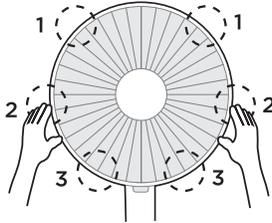


5.3 Self-catch installation.

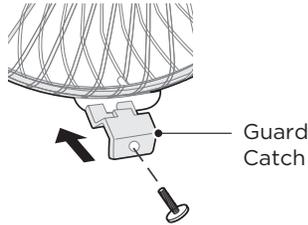


## 6 Tilt angle adjustment

Manually adjust the back cover of the motor up and down to adjust the pitch angle of the fan.

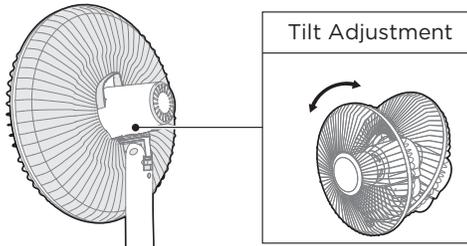


# OPERATION INSTRUCTIONS

## Instructions for Operation of Body

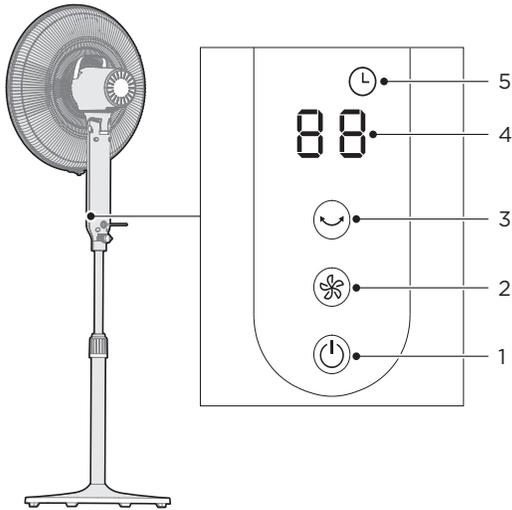

No	Button	Function description
1	 ON/OFF	• Switch operation or stop.
2	 Wind speed	• Short press the wind speed button, and wind speed will change according to: shifts of 1-2-3-4-...-12 successively; press the wind speed button for a long time to realize quick adjustment of wind speed.
3	 Oscillating	• Short press the oscillating button to start or close the oscillating function; Press the oscillating button for 2s for time setting, and then short press the oscillating button for time adjustment.
4	 Double Bit Nixie Tube	• Display wind speed or timing time.
5	 Timing display	• When set timing state, the indicator lights up.

## Instructions for Key of Remote Controller

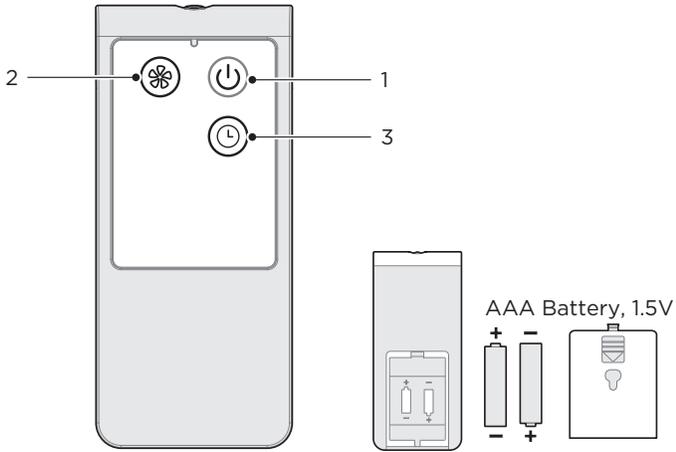

No	Key	Function description
1		• "ON/OFF" key
2		• "SPEED" key
3		• "TIMER"key

### NOTE

Effective Range of Remote Control: within 5 m distance and 30-degree deflection in front of Product. Use manganese or alkaline batteries of type "AAA". Do not use rechargeable batteries.

# CLEANING AND MAINTENANCE

**The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.**

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.  
Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.
6. Be sure to unplug from the electrical supply source before cleaning.
7. Plastic parts should be cleaned with a soft cloth moisten with mild soap.  
Thoroughly remove soap film with dry cloth.

# TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The machine does not work properly after installed	• The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	• The switch on the body is not turned on.	Turn on the switch on the body.
The remote does not work	• The battery needs replacing.	Replace the battery.
	• The remote is being used more than 5m away from the fan.	Use the remote closer to the fan and make sure it is pointing directly at the display panel.

# TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

# DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



*make yourself at home*



[www.midea.com](http://www.midea.com)

© Midea 2022 all rights reserved