


INSTRUCTION MANUAL

20L MICROWAVE OVEN

MM2-EM20PF(BK)

MM2-EM20PF(WH)

 Please review this instruction manual before operating.

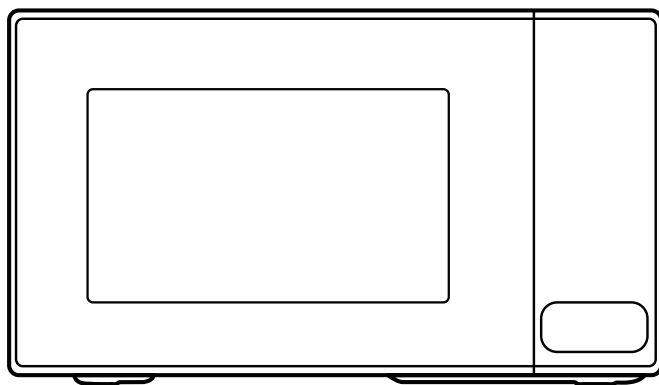

TOSHIBA

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Specifications	EN-02
Important safety instructions	EN-03
To reduce the risk of injury to persons grounding installation	EN-08
Cleaning	EN-10
Utensils.....	EN-11
Materials you can use in microwave oven	EN-12
Materials can not be used in microwave oven	EN-14

PRODUCT SETTING

Setting up your oven	EN-15
----------------------------	-------

INSTRUCTION FOR USE

Before using for the first time	EN-18
Operation	EN-19
1. Power levels	EN-20
2. Clock setting	EN-20
3. Kitchen timer	EN-21
4. Microwave cooking	EN-21
5. Speedy cooking	EN-22
6. Defrost by weight	EN-23
7. Defrost by time	EN-23
8. Auto menu	EN-24
9. Lock function.....	EN-26
10. ECO function.....	EN-26
11. Inquiring function.....	EN-27
12. Mute mode	EN-27

13. Memory function	EN-28
14. Multi-stage cooking.....	EN-29

CLEANING AND MAINTENANCE

Cleaning	EN-31
Trouble shooting	EN-33

 


BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c). **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

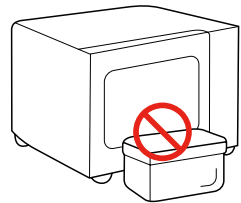

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

SPECIFICATIONS

MODEL	MM2-EM20PF(BK) MM2-EM20PF(WH)
RATED VOLTAGE /FREQUENCY	230-240 V~ 50 Hz
MICROWAVE POWER INPUT	1200-1270 W
MICROWAVE POWER OUTPUT	750-800 W



All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:



 
Read and follow the specific: **"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"**.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.




Keep the appliance and its cord out of reach of children less than 8 years.

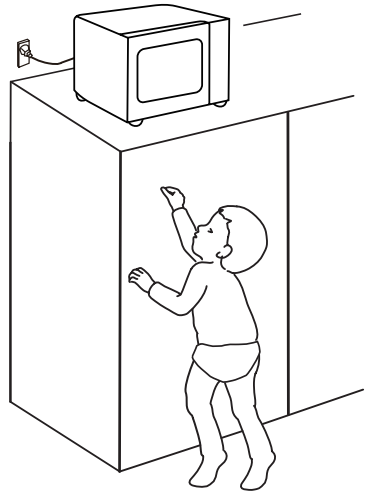



If the supply cord is damaged, it must be replaced by the


IMPORTANT SAFETY INSTRUCTIONS

 
manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


 **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.


 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


 **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.


 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.



 Only use utensils that are suitable for use in microwave ovens.

 If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

 
 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature

IMPORTANT SAFETY INSTRUCTIONS

checked before consumption, in order to avoid burns.



The oven should be cleaned regularly and any food deposits removed. Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

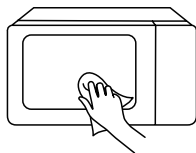

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly

result in a hazardous situation.



Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)




The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)





This appliance is intended to be used in household and similar applications such as:


1. staff kitchen areas in shops, offices and other working environments;
2. by clients in hotels, motels and other residential type environments;
3. farm houses;
4. bed and breakfast type environments.

 
IMPORTANT SAFETY INSTRUCTIONS


 The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.


 The rear surface of appliances shall be placed against a wall.


 The appliance is intended to be used freestanding.


 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

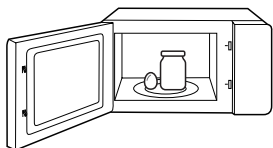

 The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

 Metallic containers for food and beverages are not allowed during microwave cooking.

 The appliance shall not be cleaned with a steam cleaner.

 The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)

IMPORTANT SAFETY INSTRUCTIONS



The appliances are not intended to be operated by means of an external timer or separate remote-control system.

READ CAREFULLY AND KEEP FOR
FUTURE REFERENCE
HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



WARNING

Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS



CAUTION

 
Personal Injury Hazard:

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**"

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

 
Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

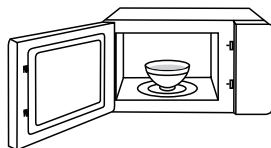





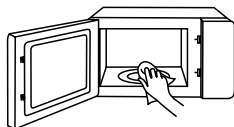





 

 



NOTE





 



KEEP THE CAVITY AND
WAVEGUIDE AREA CLEAN



 







 





MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. 
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. 
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. 
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. 
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. 
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. 
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. 
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming. 

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
 Metal twist ties	May cause arcing and could cause a fire in the oven.	
 Paper bags	May cause a fire in the oven.	
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	

PRODUCT SETTING

SETTING UP YOUR OVEN

 
(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.




Turntable Ring Assembly




Instruction Manual

 

Glass Tray

 

Turntable Shaft

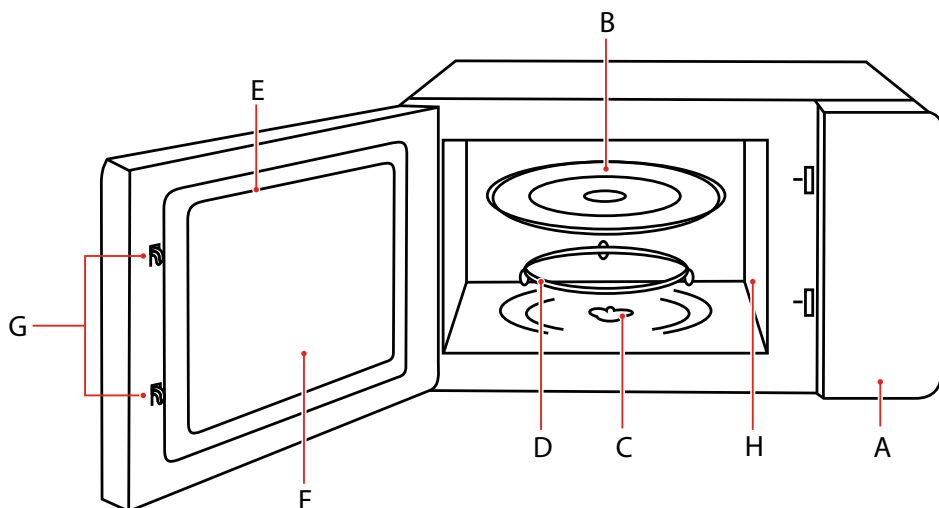 

- A. Control panel
- B. Glass tray
- C. Turntable shaft
- D. Turntable ring assembly

- E. Door assembly
- F. Observation window
- G. Safety interlock system
- H. Waveguide cover

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION

 
Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.

How to put the turntable in place:

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ③. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the centre of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

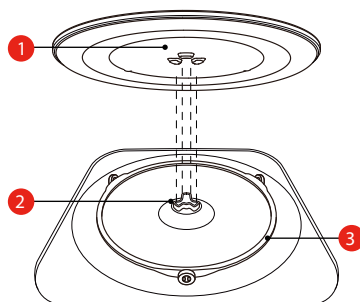

 - 1) Glass Tray
2) Turntable Shaft
3) Turntable Ring Assembly

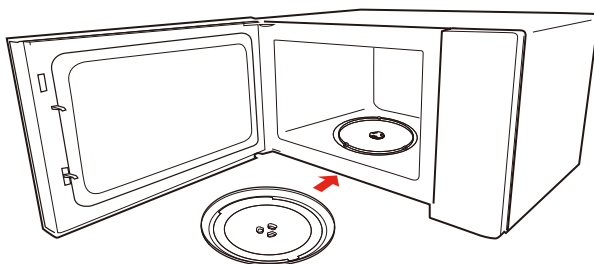

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

 
COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

- 1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 85cm.
 - b. The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

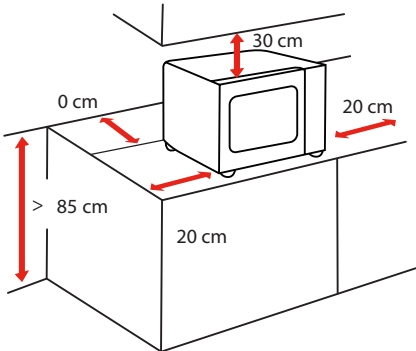


SIDE	DISTANCE CM
Top	30cm
Left	20cm
Right	20cm
Behind	0cm
Front	Open

- 2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

 • Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

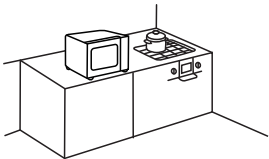

The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

It is normal that the oven may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

 
Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.



- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES

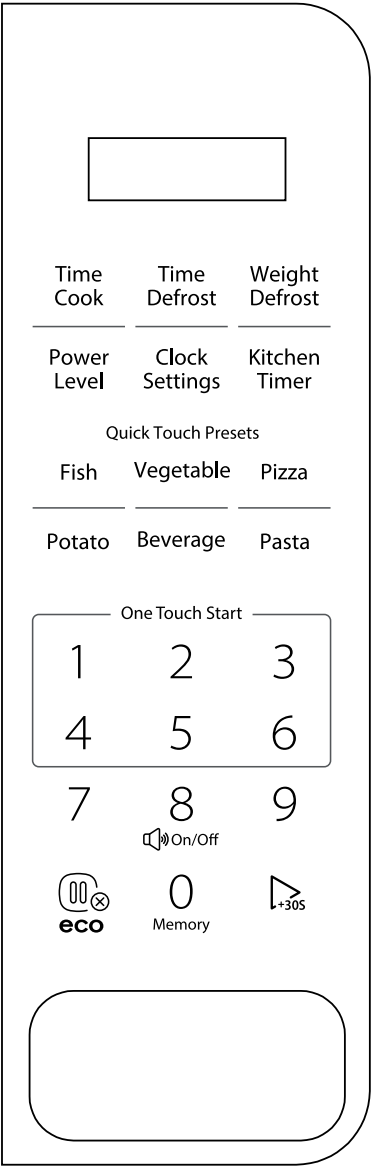

1. POWER LEVELS

11 power levels are available.

POWER	DISPLAY
0%	PL0
10%	PL1
20%	PL2
30%	PL3
40%	PL4
50%	PL5
60%	PL6
70%	PL7
80%	PL8
90%	PL9
100%	PL10

2. CLOCK SETTING

When the microwave oven is plugged into an outlet, "0:00" will display.

- a

Press "Clock Settings" once and then "00:00" will display.

Clock Settings
- b

Press the number keys to enter the time, the maximum time value is 12:59. For example, press "1,2,1,0" in turn to set the clock to "12:10".

1 2 3
- c

Press "Clock Settings" to confirm. The clock is set.

Clock Settings



NOTE

- To reset the clock, please repeat step a to step c.
- If the clock is not set, it will not work when powered.
- In the process of setting clock, if the "Clock Settings" is not pressed or if there is no operation within 1 minute, the setting is invalid.


3. KITCHEN TIMER

a Press “Kitchen Timer” once and then “00:00” will display.



b Press the number keys to enter the time, the maximum time value is “99:99”. For example, press “1,2,0,0” in turn to set the kitchen timer to “12:00”.



c Press  to start counting down.



NOTE

- The kitchen timer setting is different from the clock setting, it is simply a timer.
- Any other program can't be set during the kitchen timer.

4. MICROWAVE COOKING

a Press “Time Cook” once, and then “00:00” will display.




b Press the number keys to set the cooking time, the maximum time value is “99:99”.




c Press “Power Level” once, “PL10” will display. And then press the number keys to set the power level. The 11 power levels are available.



 
d Press  to start cooking.




NOTE

- In the process of setting, if the " " is pressed or if there is no operation within 1 minute, the setting is invalid.
- If "PL0" is selected, the oven will work with fan for no power. You can use this level to remove the odor of the oven.
- The power level can be changed during operation. Press "Power level" once and then the current power will display. Press the number keys to change the power. The oven will work with the selected power.

5. SPEEDY COOKING


a In standby mode, pressing the number keys 1 to 6 let you quickly select a cooking time at 100% power level from 1 to 6 minutes. Then you can press " " to increase the cooking time. The maximum time value is "99:99".

1	2	3
4	5	6

b In standby mode, press " " to cook food with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:99".



 NOTE

- In microwave cooking state, defrosting by time state and the second stage of multi-stage cooking state, each one more press on " " can increase the cooking time by 30 seconds. (Except defrosting by weight, the first stage of multi-stage and the auto menu.)


6. DEFROST BY WEIGHT

a Press "Weight Defrost" once and then the screen will display "dEF1".



b Press the number keys to set the weight of the food. The range of weight is 100 to 2000g.



c Press  to start defrosting.



7. DEFROST BY TIME

a Press "Time Defrost" once and then the screen will display "dEF2".




b Press the number keys to set the desired defrost time. The maximum time value is "99:99".



c Press "Power Level" once, "PL3" will display. And then press number keys to set the power level.



- d** Press  to start defrosting.



NOTE

- During defrosting, the power level can not be changed.


8. AUTO MENU

- a** Press the corresponding menu key repeatedly to select the weight of the food you want.
Example: Press "Fish" once, the default weight of the food will display.

Fish

- b** Press "Fish" repeatedly to set the weight of the food.

Fish

- c** Press  to start cooking.



NOTE



- For Vegetable, Pizza, Potato, Beverage and Pasta, the setting of auto menu can be done by the same way as above.
- Before the step c, press the other menu key to cancel the previous settings.

AUTO MENU CHART


MENU	DISPLAY	WEIGHT/ AMOUNT	POWER LEVEL
Fish	250	250g	PL8
	350	350g	
	450	450g	
Vegetable	200	200g	PL10
	300	300g	
	400	400g	
Pizza	200	200g	PL10
	400	400g	
Potato	200	200g	PL10
	400	400g	
	600	600g	
Beverage	1 -	1 CUP (120ml)	PL10
	2 -	2 CUPS (240ml)	
	3 -	3 CUPS (360ml)	
Pasta	50	50g (with 450g cold water)	PL8
	100	100g (with 800g cold water)	

9. LOCK FUNCTION

You can use this function to prevent children from accidentally turning the oven on.


- a** To activate the lock:
In standby mode, press and hold "  " for three seconds. A beep sounds and "  " will display.



- b** To deactivate the lock:
In the locked state, press and hold "  " for three seconds. A beep sounds.



10. ECO FUNCTION

- a** To enter ECO mode:
In standby mode and the oven door closed, press "  " once, the screen will turn off.



- b** To cancel ECO mode:
In ECO mode, press any key, or open the door will cancel it.

11. INQUIRING FUNCTION


- a** If the clock has been set, the current time will display for three seconds by pressing "Clock Settings" in the cooking state.

Clock
Settings


- b** In the microwave cooking state, press "Power Level" to inquire about the power level. It will display for three seconds. In auto menu and defrosting state, the power level can not be inquired.

Power
Level

12. MUTE MODE

- a** To activate the mute mode:
In standby mode, press and hold "  8 " for three seconds. A beep sounds. When you press the keys, it does not make a sound.


 8
On/Off

- b** To deactivate the mute mode:
In mute mode, press and hold "  8 " for three seconds. A beep sounds.

 
 8
On/Off

13. MEMORY FUNCTION


You can save the settings for a dish in the memory and call it up again.

- a** Press "  " repeatedly to select memory 1-3 procedure.
"1", "2" and "3" will display in order.



- b** If the procedure has been set, press "  " to start working. Otherwise, please continue to set.



- c** After finishing the setting, press "  " once to save the procedure.



Example: Set memory 2 (cook food with 80% microwave power for 3 minutes).

- a** In standby mode, press "  " twice, then "2" will display.

 


- b** Press "Time Cook" once, and then press the number keys "3", "0", "0" in order.



- c** Press "Power Level" and then press the number key "8".



- d** Press " " to save the setting and "2" will display.



NOTE

- The auto menu can not be set as memory function .
- If the power is not cut off, the procedure will be saved all the time.

14. MULTI-STAGE COOKING

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes.

- a** Press "Time Defrost" once and then the screen will display "dEF2".

Time
Defrost

- b** Press "5, 0, 0" to set the desired defrost time to 5 minutes.

5 0 0
Memory Memory

- c** Press "Time Cook" once, and then "00:00" will display.

Time
Cook


- d** Press "7, 0, 0" to set the desired cooking time to 7 minutes.

7 0 0
Memory Memory

- e Press "Power Level" once, "PL10" will display.
And then press "8" to set the power level.

Power
Level

8
On/Off

- f Press  to start cooking.


+30s



NOTE

- Two cooking stages can be set in multi-stage cooking.
- If you set defrost function, it will work automatically in the first stage.
- The kitchen timer, auto menu cannot be set as one of the multi-stage.

CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Wash new sponge cloths thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges

 


Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

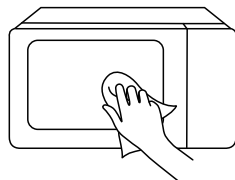

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:

 
Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

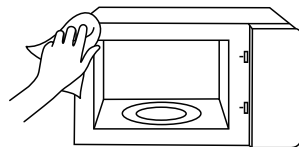

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:

 
Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

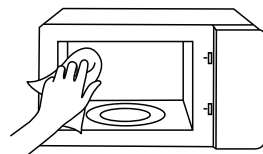

RECESS IN THE COOKING COMPARTMENT

Damp cloth:

 Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

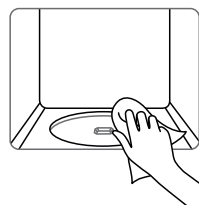

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.



DOOR PANELS

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.
If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with soft damp cloth.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

#DetailsMatter