


INSTRUCTION MANUAL

MICROWAVE OVEN

ML3-EM45PF(SS)

ML3-EM45PFI(BS)

Please review this instruction manual before operating.

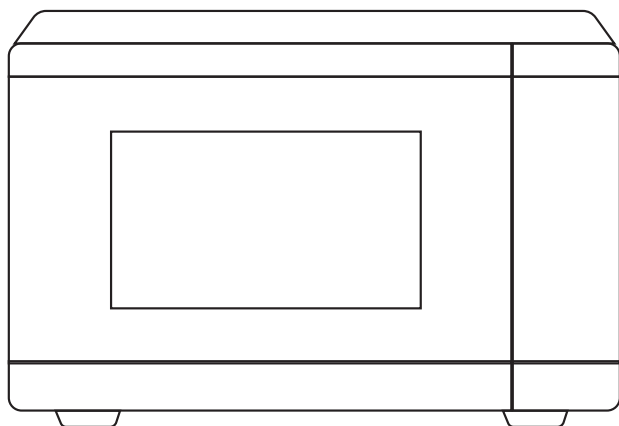

TOSHIBA

CONTENTS

PRODUCT SAFETY

| | |
|--|-------|
| Precautions to avoid possible exposure to excessive microwave energy | EN-01 |
| Specifications | EN-02 |
| Important safety instructions | EN-03 |
| To reduce the risk of injury to persons grounding installation..... | EN-07 |
| Cleaning | EN-09 |
| Utensils..... | EN-10 |
| Materials you can use in microwave oven | EN-11 |
| Materials can not be used in microwave oven | EN-13 |

PRODUCT SETTING

| | |
|---|-------|
| Names of microwave oven parts and accessories | EN-14 |
| Turntable installation | EN-15 |
| Countertop installation | EN-16 |
| Installation | EN-16 |

INSTRUCTION FOR USE

| | |
|---------------------------------------|-------|
| Before using for the first time | EN-17 |
| Control panel and features | EN-18 |
| 1. Standby mode..... | EN-19 |
| 2. Setting the clock..... | EN-19 |
| 3. Setting the kitchen timer..... | EN-20 |
| 4. Microwave cooking | EN-20 |
| 5. Defrost by weight | EN-21 |
| 6. Defrost by time | EN-21 |
| 7. Multi-stage cooking | EN-22 |
| 8. Popcorn | EN-23 |
| 9. Sensor menu | EN-23 |

10. Speedy cooking EN-24

11. Inquiring function EN-24

12. Eco function EN-24

13. Lock function for children EN-25

14. Mute mode EN-25

CLEANING AND MAINTENANCE

Cleaning..... EN-26

Trouble shooting EN-28




NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

■ PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c). **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

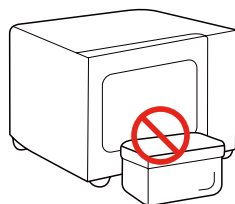

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

SPECIFICATIONS

| | |
|--------------------------|-----------------------------------|
| MODEL | ML3-EM45PF(SS) ML3-EM45PFI(BS) |
| Rated Voltage/Frequency: | 230-240 V~ 50 Hz |
| Microwave Input: | 1800 W |
| Microwave Output: | 1200 W |



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:




Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**".



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



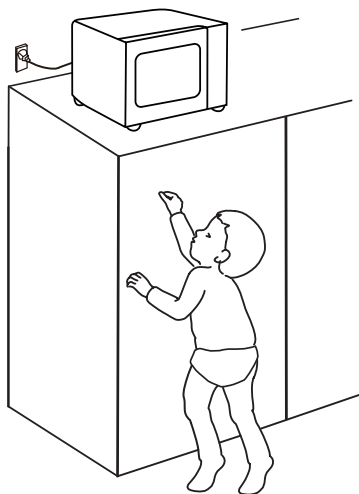

Children should be supervised to ensure that they do not play with the appliance.





If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS


 **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.


 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


 **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.


 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.




 Only use utensils that are suitable for use in microwave ovens.

 If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.


 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

IMPORTANT SAFETY INSTRUCTIONS



The oven should be cleaned regularly and any food deposits removed. Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

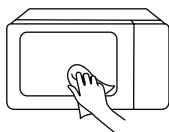

Only use the temperature probe recommended for this oven. (For ovens provided with a facility to use a temperature-sensing probe.)



The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.)




This appliance is intended to be used in household and similar applications such as:


1. staff kitchen areas in shops, offices and other working environments;
2. by clients in hotels, motels and other residential type environments;
3. farm houses;
4. bed and breakfast type environments.




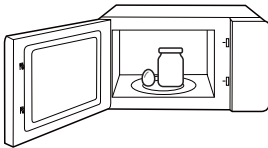
The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.


IMPORTANT SAFETY INSTRUCTIONS

 The appliance is intended to be used freestanding.


 The rear surface of appliances shall be placed against a wall.


 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.




 The appliance must not be installed behind a

decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)

 The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

 Metallic containers for food and beverages are not allowed during microwave cooking.

 The appliance shall not be cleaned with a steam cleaner.

READ CAREFULLY AND KEEP FOR
FUTURE REFERENCE
HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



WARNING

Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS



CAUTION


Personal Injury Hazard:

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**".

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

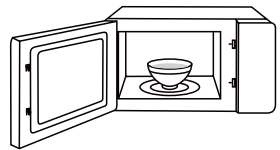





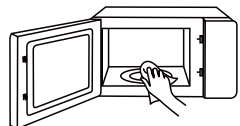





 

 



NOTE





 



KEEP THE CAVITY AND
WAVEGUIDE AREA CLEAN



 







 





MATERIALS YOU CAN USE IN MICROWAVE OVEN

| UTENSILS | REMARKS | |
|--|---|--|
|  <p>Browning dish</p> | <p>Follow manufacturer’s instructions.</p> <p>The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.</p> |  |
|  <p>Dinnerware</p> | <p>Microwave-safe only. Follow manufacturer’s instructions. Do not use cracked or chipped dishes.</p> |  |
|  <p>Glass jars</p> | <p>Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.</p> |  |
|  <p>Glassware</p> | <p>Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.</p> |  |
|  <p>Oven cooking bags</p> | <p>Follow manufacturer’s instructions. Do not close with metal tie.</p> <p>Make slits to allow steam to escape.</p> |  |
|  <p>Paper plates and cups</p> | <p>Use for short-term cooking/warming only. Do not leave oven unattended while cooking.</p> |  |
|  <p>Paper towels</p> | <p>Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.</p> |  |
|  <p>Parchment paper</p> | <p>Use as a cover to prevent splattering or a wrap for steaming.</p> |  |

MATERIALS YOU CAN USE IN MICROWAVE OVEN

| UTENSILS | REMARKS |
|---|--|
|  Plastic | Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.  |
|  Plastic wrap | Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.  |
|  Thermometers | Microwave-safe only (meat and candy thermometers).  |
|  Wax paper | Use as a cover to prevent splattering and retain moisture.  |

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

| UTENSILS | REMARKS | |
|--|--|---|
|  Aluminum tray | May cause arcing. Transfer food into microwave-safe dish. |  |
|  Food carton with metal handle | May cause arcing. Transfer food into microwave-safe dish. |  |
|  Metal or metal trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing. |  |
|  Metal twist ties | May cause arcing and could cause a fire in the oven. |  |
|  Paper bags | May cause a fire in the oven. |  |
|  Plastic foam | Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. |  |
|  Wood | Wood will dry out when used in the microwave oven and may split or crack. |  |

PRODUCT SETTING

 
NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)


Remove the oven and all materials from the carton and oven cavity.




Turntable Ring Assembly



Glass turntable

 

Instruction Manual

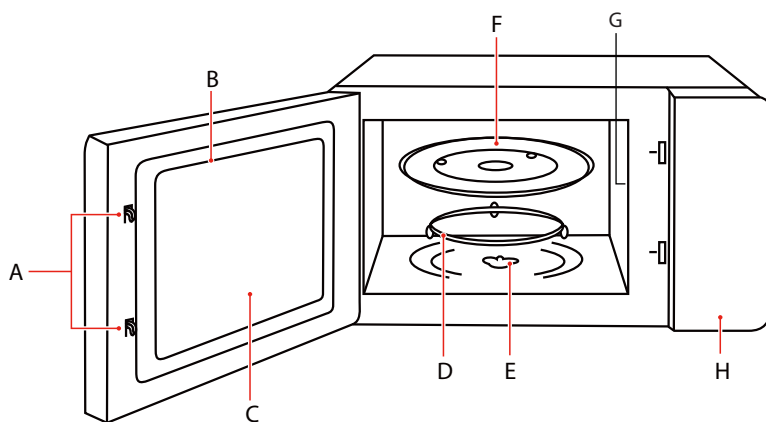

- A. Safety interlock system
- B. Door assembly
- C. Observation window
- D. Turntable ring assembly

- E. Turntable shaft
- F. Glass turntable
- G. Waveguide cover
- H. Control panel

TURNTABLE INSTALLATION

Cleaning the cooking compartment and putting the turntable in place.



For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.

Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to put the turntable in place:

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass turntable ① on the turntable ring assembly ③. Fit the raised, curved lines in the center of the glass turntable bottom between the three spokes of the shaft.

Make sure that the glass turntable ① engages in the turntable shaft ② in the center of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

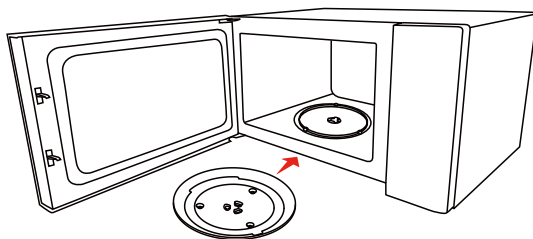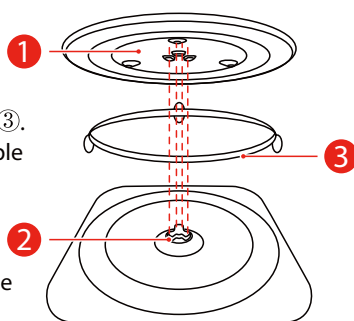

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass turntable upside down. The glass turntable should never be restricted.
- Both glass turntable and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass turntable for cooking.
- Never restrict the movement of the turntable.
- If glass turntable or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

COUNTERTOP INSTALLATION


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 85cm.
 - b. The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Place the oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

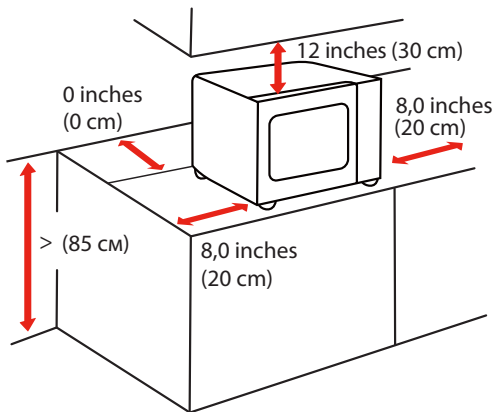


| SIDE | DISTANCE (INCHES/CM) |
|--------|-------------------------|
| Top | 12 inches/30cm |
| Left | 8.0 inches/20cm |
| Right | 8.0 inches/20cm |
| Behind | 0 inches/ 0cm |
| Front | Open |

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

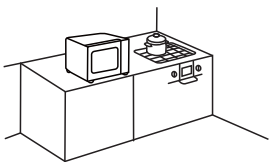

The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

It is normal that the oven may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.




NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES

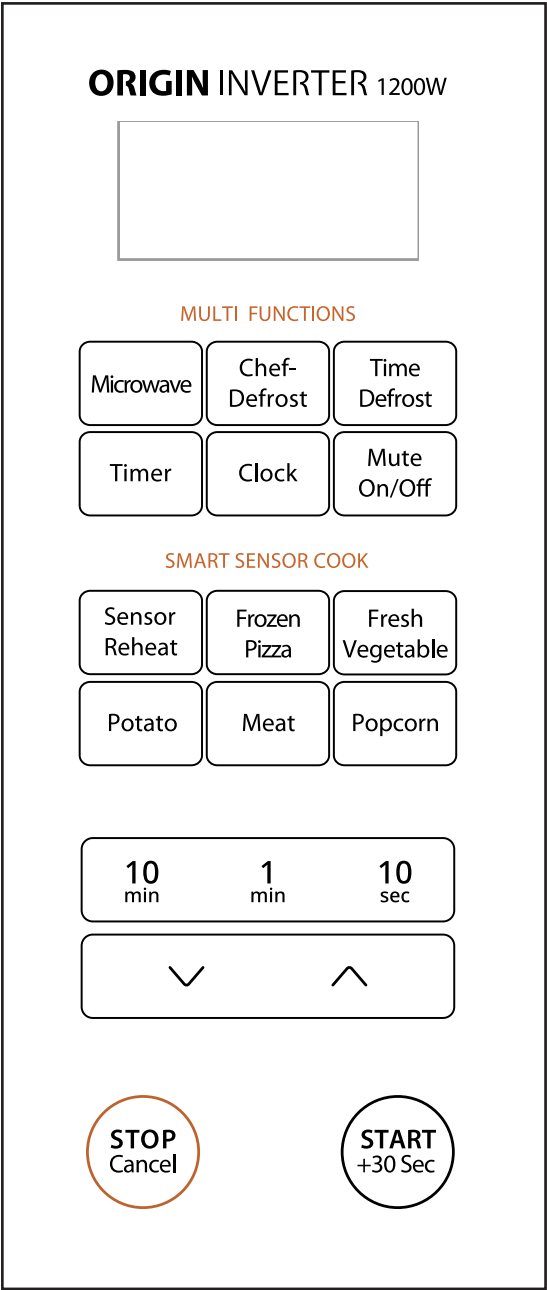

1. STANDBY MODE

- a When the microwave oven is plugged into an outlet, "00:00" will display, and the oven will enter the standby mode.
- b During the setting, if **STOP**
Cancel is pressed or if there is no operation within 1 minute, the setting is invalid. And then the oven will enter the standby mode.
- c In the paused state of cooking, if **STOP**
Cancel is pressed or there is no operation within 10 minutes, the oven will return to the standby mode.

2. SETTING THE CLOCK

- a In standby mode, press **Clock** once, "00:00" will display.



- b Press  or  to set the hour figures.



- c Press **START**
+30 Sec. to confirm.



- d Press  or  to set the minute figures.



- e Press **START**
+30 Sec. to confirm.



NOTE

- To reset the clock, please repeat step a to step e.
- The clock is a 24-hour display.

3. SETTING THE KITCHEN TIMER

- a In standby mode, press **Timer** once, "00:00" will display.


Timer
- b Press **10 min**, **1 min**, **10 sec**, **▼**, or **▲** to set the desired time.
The maximum time value is "99:50".

10 min1 min10 sec

Or

▼▲
- c Press **START +30 Sec.** to start counting down.

START +30 Sec.



NOTE

• The kitchen timer is a timer.

4. MICROWAVE COOKING

10 power levels are available

| POWER | 100% | 90% | 80% | 70% | 60% | 50% | 40% | 30% | 20% | 10% |
|---------|------|------|------|------|------|------|------|------|------|------|
| DISPLAY | PL10 | PL09 | PL08 | PL07 | PL06 | PL05 | PL04 | PL03 | PL02 | PL01 |

- a In standby mode, press **Microwave** once, "PL10" will display.

Microwave
- b Press **Microwave** repeatedly, or press **▼** or **▲** to set the power level. The 10 power levels are available.

Microwave

Or

▼▲
- c Press **START +30 Sec.** confirm.

START +30 Sec.
- d Press **10 min**, **1 min**, **10 sec**, **▼**, or **▲** to set the cooking time.
The maximum time value is "99:50".

10 min1 min10 sec

Or

▼▲
- e Press **START +30 Sec.** to start cooking.

START +30 Sec.

5. DEFROST BY WEIGHT

 
- a In standby mode, press **Chef-Defrost** once, "dEF1" will display

Chef-Defrost

- b Press **START** confirm.
+30 Sec.

START
+30 Sec.

- c Press **▼** or **▲** to set the weight of the food.
The range of weight is 100-2000g.



- d Press **START** to start defrosting.
+30 Sec.

START
+30 Sec.



NOTE

- The buzzer will sound to remind you to turn over the food during defrosting. If no operation, the oven will continue working.

6. DEFROST BY TIME

- a In standby mode, press **Time Defrost** once, "dEF2" will display.

Time Defrost

 
- b Press **START** confirm.
+30 Sec.

START
+30 Sec.

- c Press **10 min**, **1 min**, **10 sec**, **▼**, or **▲** to set the desired defrosting time.
The maximum time value is "99:50".

10 min 1 min 10 sec

Or



- d Press **START** to start defrosting.
+30 Sec.

START
+30 Sec.



NOTE

- The default power level is PL03 and it cannot be changed.
- The buzzer will sound to remind you to turn over the food during defrosting. If no operation, the oven will continue working.

7. MULTI-STAGE COOKING

Example: Defrost food for 500g and then cook with 80% microwave power for 7 minutes.

- a

In standby mode, press

Chef-Defrost

 once, "dEF1" will display

Chef-Defrost
- b

Press

START

 confirm.

+30 Sec.

START

+30 Sec.
- c

Press

▼

 or

▲

 to set the weight of the food to 500g.

▼

▲
- d

Press

Microwave

 once, "PL10" will display.

Microwave
- e

Press

Microwave

 repeatedly, or press

▼

 or

▲

 to set the power level to PL08.

Microwave

Or

▼

▲
- f

Press

START

 confirm.

+30 Sec.

START

+30 Sec.
- g

Press

10

 min ,

1

 min ,

10

 sec ,

▼

 , or

▲

 to set the cooking time to 7 minutes.

10

 min

1

 min

10

 sec

Or

▼

▲
- h

Press

START

 to start cooking.

+30 Sec.

START

+30 Sec.



NOTE

- Two cooking stages can be set in multi-stage cooking.
- If you set the defrost function, it will work in the first stage.
- The speedy cooking, sensor menu, auto menu, and kitchen timer can't be set as one of the multi-stage.

8. POPCORN

a In standby mode, press **Popcorn** once and then “50g” displays.

Popcorn

b Press **Popcorn** repeatedly to set the weight of the food.

Popcorn

c Press **START**
+30 Sec. to start cooking.

START
+30 Sec.

Menu chart

| Menu | Weight | Display | Power |
|---------|--------|---------|-------|
| Popcorn | 50g | 50g | PL10 |
| | 85g | 85g | |
| | 100g | 100g | |

9. SENSOR MENU

Sensor Cook allows you to cook many of your favorite foods without selecting a cooking time and power level. The microwave oven automatically determines the required cooking time for each food item. And the sensor menus will cook with microwave power.


a In standby mode, press the corresponding sensor menu key.
Example: Press **Sensor Reheat** once and then “SC-1” displays.

Sensor Reheat Frozen Pizza Fresh Vegetable
Potato Meat

b Press **START**
+30 Sec. to start sensing.
When the sensing is complete, the calculated cooking time will start to count down.

START
+30 Sec.

| Menu | Sensor Reheat | Frozen Pizza | Fresh Vegetable | Potato | Meat |
|---------|---------------|--------------|-----------------|--------|------|
| Display | SC-1 | SC-2 | SC-3 | SC-4 | SC-5 |



NOTE

- Do not open the oven door during the sensing, or the program will be cancelled.
- Once the calculated cooking time is displayed, you can open the oven door to stir, turn or rearrange the food.
- The weight of the food in the sensor cooking must be greater than 110g.

10. SPEEDY COOKING

a In standby mode, press **START** **+30 Sec.** to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:50".

START
+30 Sec.

b In standby mode, press **10 min** , **1 min** , or **10 sec** to set a cooking time at 100% power. Then press **START** **+30 Sec.** to start cooking.

10 min **1 min** **10 sec**

START
+30 Sec.



NOTE

• In the microwave cooking and defrost by time state, each more press on **START** **+30 Sec.** can increase the corresponding cooking time.
And press **10 min** , **1 min** , or **10 sec** can change the cooking time.
(Except the defrosting by weight, sensor menu, and auto menu.)

11. INQUIRING FUNCTION

a If the clock has been set, the current time will display for three seconds by pressing **Clock** in the cooking state.

Clock

b In the microwave cooking state, press **Microwave** to inquire about the power level. It will display for three seconds.

Microwave

12. ECO FUNCTION

a To enter ECO mode:
In standby mode, and the oven door is closed, press **STOP** **Cancel** once. The screen will turn off.

STOP
Cancel

b To cancel ECO mode:
In ECO mode, pressing any key, or opening the door will cancel it.

13. LOCK FUNCTION FOR CHILDREN

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

- a** To activate the lock:
In standby mode, press and hold **STOP**
Cancel for three seconds.
A beep sounds and the locked icon will display.



- b** To deactivate the lock:
In the locked state, press and hold **STOP**
Cancel for three seconds.
A beep sounds.



14. MUTE MODE

- a** To activate the mute mode:
In standby mode, press **Mute**
On/Off once. "OFF" will display.
When you press the key, it does not make a sound.



- b** To deactivate the mute mode:
In mute mode, press **Mute**
On/Off once. A beep will sound
and "On" will display.



CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. Here are the instructions on how to properly care for the microwave oven.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, see the information in the table. Wash new sponge or cloth thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

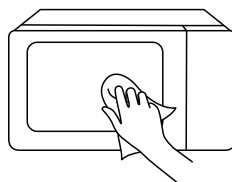

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

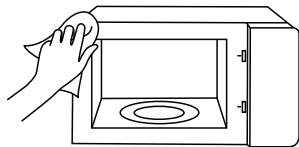

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:


Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

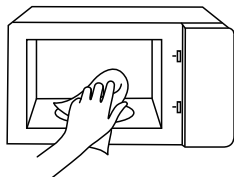

RECESS IN THE COOKING COMPARTMENT

Damp cloth:

Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

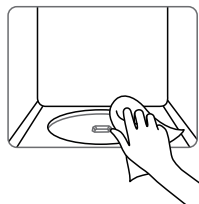

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.



DOOR PANELS

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

| Normal | |
|--|---|
| Microwave oven interfering TV reception | Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal. |
| Dim oven light | In low power microwave cooking, oven light may become dim. It is normal. |
| Steam accumulating on door, hot air out of vents | In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal. |
| Oven started accidentally with no food in. | It is forbidden to run the unit without any food inside. It is very dangerous. |

| Trouble | Possible Cause | Remedy |
|-------------------------|--|---|
| Oven cannot be started. | (1) Power cord is not plugged in tightly. | Unplug. Then plug again after 10 seconds. |
| | (2) Fuse blowing or circuit breaker works. | Replace fuse or reset circuit breaker (repaired by professional personnel of our company) |
| | (3) Trouble with outlet. | Test outlet with other electrical appliances. |
| Oven does not heat. | (4) Door is not closed well. | Close door well. |



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

#DetailsMatter