

TOSHIBA

TUMBLE DRYER

OWNER'S MANUAL

MODEL:

TD-BP110GHAU(WS)

TD-BP110GHAU(MG)

Read This Manual



Read and follow the instructions carefully.
Keep the operation instructions handy for
future use.

Please contact the customer service if
you are in need of a new user manual.

CONTENTS

SAFETY INSTRUCTIONS

- Safety Instructions 2

INSTALLATION

- Product Description 10
- Installation 10

OPERATION

- Quick Start 13
- Before Each Drying 14
- Control Panel 15
- Options..... 17
- Display..... 20
- Programs..... 21
- Instructions to Connection with the TSmartLife App..... 22
- Drying Programs Table 25

MAINTENANCE

- Cleaning and Care 26
- Trouble Shooting 29
- Technical Specifications 31

SAFETY INSTRUCTIONS

■ Safety Instructions

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury or loss of life.

Explanation of the symbols:



Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.



Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.



Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

Intended Use

- This dryer is intended for household use only. It is not for commercial use or shared use (i.e. by use in an apartment.)
- This dryer is for indoor use only.

SAFETY INSTRUCTIONS

Safety Instructions

- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Improper connection for the appliance when using not grounded outlet or when GND terminal of outlet is not suitable with GND terminal of power plug, can result in risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the appliance is properly grounded.

Warning!

Risk of Electric Shock

- Do not use any outlets with rated current less than that of appliance.
- Do not pull the power cord forcefully. Hold power plug instead.
- Do not touch the plug with wet hands.
- Do not bend, clamp or damage the power cord and the power plug.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAFETY INSTRUCTIONS

- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not use a multi-plug outlet, an extension power cord or double adapter with this appliance.
- Plug must be accessible after installation.

Risk of Injury

- Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not lean on the opened door of the dryer.
- Do not drink condensed water.

Risk of Product Damage

- Do not put more load than rated in this user manual. See the related chapter in the user manual.
- Do not operate the dryer without Doorfilter and Base filter.
- Do not dry the clothes without spin-dry.
- Do not expose the dryer directly under the sun.
- Do not install the dryer in humid and wet environment.
- Before maintenance, unplug the appliance.
 - Do not spray water on the appliance.
 - Do not overturn the appliance.

SAFETY INSTRUCTIONS

Warning!

Risk of Explosion & Fire

- Please do not dry the clothes with any flammable substances such as kerosene or alcohol.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- Remove all objects from pockets such as lighters and matches.

SAFETY INSTRUCTIONS

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products are placed in a tumble dryer, they should first be washed in hot water with extra detergent. This will reduce, but not eliminate, the hazard.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Openings must not be obstructed.
- The door filter and the base filter should be cleaned frequently.
- Lint must not be allowed to accumulate around the tumble dryer (heat exchanger, inside drum, around door etc.)

Safety with Children

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Animals and children may climb into the machine. Check the machine before every operation.
- Glass door may be very hot during the operation. Keep children and pets far away from the machine during the operation.

SAFETY INSTRUCTIONS

For Use in EU Countries:

- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children of less than 3 years should be kept away unless continuously supervised.

UV Radiation Safety

- This warning only covers products which contain a UV-C lamp and which have a disinfection function with UV-C lamp.
- The device contains a lamp that emits UV-C rays. Do not look at the source of light while the lamp is operating!
- UV-C lamp is used to provide disinfection in textile products.
- Do not take the UV-C lamp out of the device and do not operate it outside!
- Do not touch the lamp!
- Use of the product except for its purpose or damage to the UV-C lamp protection glass or surrounding may cause dangerous UV-C radiation to occur. UV-C radiation can damage the eyes and skin even in low doses. Do not operate any product which is damaged!
- Do not remove the UV-C lamp protection glass. Do not operate the product without the UV-C lamp protection glass!

SAFETY INSTRUCTIONS

- After the stops due to various reasons (power outage, fuse problem, machine door opening, etc.) while UV Hygiene Programs are in progress, the program will resume to disinfection from where it left.
- In cases where UV-C lamp and related parts need to be replaced (expiration of lamp life, break of lamp glass, etc.), call the technical service. Do not try to replace the parts by yourself. When waiting for technical service, make sure that all openable covers, such as the door, drawer, or maintenance cover, are closed and the plug is disconnected!
- Keep children away while using any programs with activated UV-C lamp!
- It can cause allergies, do not breathe directly!
- Always read the product guide before using the device and use the product according to the instructions!
- The placement of the UV-C lamp and lamp protector glass in your product is visually indicated.
- Hygiene program incorporating UV is effective for removing *Escherichia coli*, *Staphylococcus aureus* bacteria.

SAFETY INSTRUCTIONS

ENVIRONMENT

Disposal of Old Appliances

For use in EU countries

This appliance is labelled in accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). The directive provides the framework for the EU-wide take-back and recycling of waste equipment.



**The devices marked with this symbol
must not be disposed of in household waste!**


For use in other countries

This appliance does not have symbol above. If you want to dispose your appliance, please contact your local authority or retailer for futher information on collection and disposal.

Model	Rated capacity
TD-BP110GHAU(WS) TD-BP110GHAU(MG)	10.0kg

INSTALLATION

■ Product Description

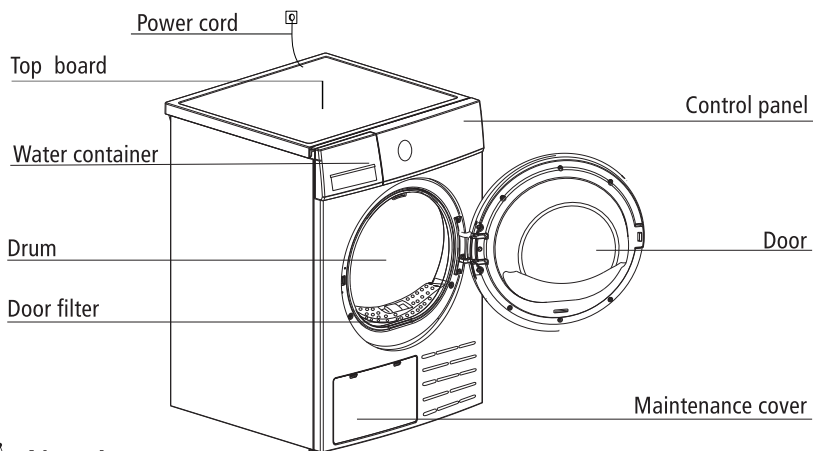


📌 Note!

The product picture is for illustration only, please refer to real product as reference.


Accessories

The following parts are optional for specific models.

If your dryer has following parts, please wear gloves to install them as per the instruction below.

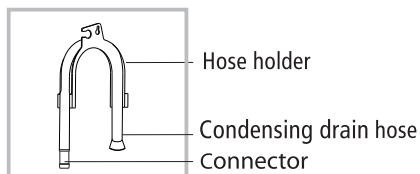

■ Installation

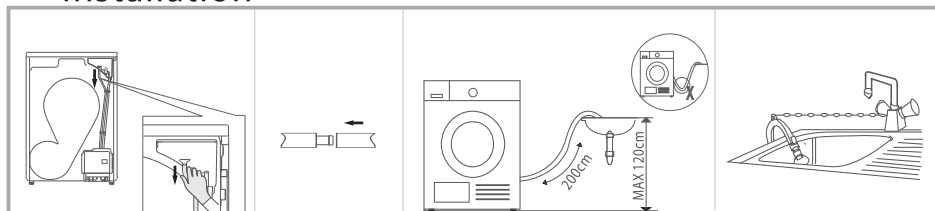

Remove the drain hose from the housing drawer.

Insert the drain hose and the external drainage hose into the connector.


Put the hose holder in the washing basin or any other sink.

INSTALLATION

The following drying support is optional for specific models.

If your dryer has following parts, please wear gloves to install them as per the instruction below.

If you want to install the drying support, first clamp the support on the door filter, then hook it in the front support slot (as shown below).

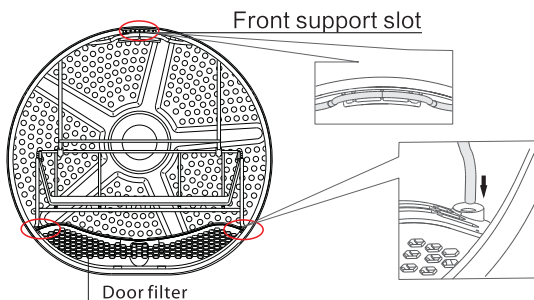

Note!

Drying support is mainly used for items that are not suitable for tumble dry, like hats, shoes, plush toys etc. Warm program is recommended for this function and if items are not completely dried once, you can restart the program to complete drying. All items dried with support must meet the warning requirements of page 5. Leather products also cannot be dried.

Transport

- Move cautiously. Do not grasp any salient parts of machine.
- The machine door cannot be used as the handle for transport.
- If the dryer can't be transported erectly, the dryer can be tilted to right less than 30°.

Risk of injury and damage!

Improper handling of the appliance may result in injury.

- This appliance should only be transported by two or more people holding the appliance securely.
- Remove all obstacles on the transport route and from the installation location, e.g. open doors and clear away objects lying on the floor.
- Do not use the open door as a handhold.
- Remove all package materials before using the appliance.
- Before setting up the tumble dryer, check it for any externally visible damage. Do not install or use a damaged tumble dryer.
- Do not install the tumble dryer in a room where there is a risk of frost occurring.


At temperatures around freezing point the tumble dryer may not be able to operate properly. There is a risk of damage if the condensed water is allowed to freeze in the pump and hoses.

INSTALLATION

Installation Place


Warning!

- Do not allow children to play with packaging materials.
 - The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
 - Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.
1. It is recommended that, for your convenience, the machine is positioned close to your washing machine.
 2. The tumble dryer must be installed in a clean place, where dirt does not accumulate. Air must be able to circulate freely around the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the machine.
 3. To keep vibration and noise within minimum level when the dryer is in use, it must be placed on a firm and level surface.
 4. The feet must never be removed.

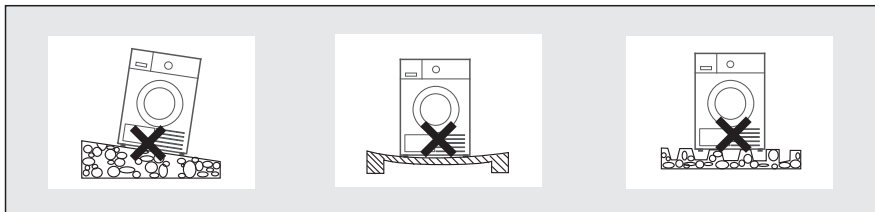

Level Adjusting

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet by hand or using a tool.

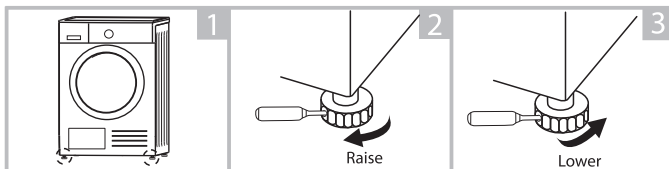

Power Supply Connection

1. Make sure that the voltage of the power supply matches the electrical specifications.
2. Do not connect the dryer with the power connection board, a universal plug or outlet, do not use multi-plug adapters and extension cables.


OPERATION

■ Quick Start


Note!

Before use, make sure the tumble dryer is installed correctly.

Before Drying

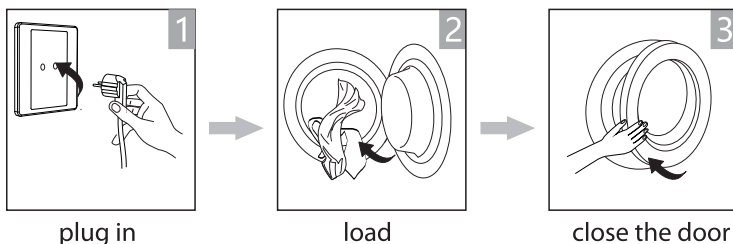


Drying

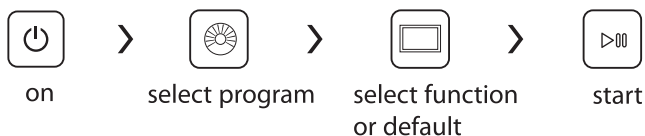

After Drying

Buzzer beep and "End" on display.

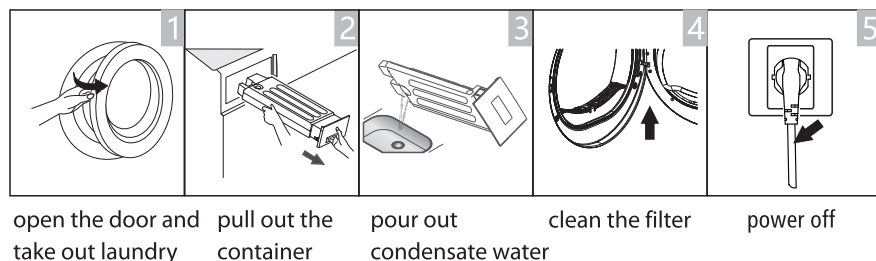

Note!

- If the outlet with a switch is used, please press the switch to turn off the power directly.

OPERATION

■ Before Each Drying


Note!

- Leave it to stand for 2 hours after transporting. Before first use, please use the soft fabric to clean the inside drum.
 1. Put some clean rags into the drum.
 2. Plug the power, press **【 ⏻ 】**.
 3. Select the **【 REFRESH 】** program, press **【 ▷⏏ 】** button.
 4. After finishing this program, please follow the “cleaning and care ” to clean the door filter.
- During drying, the compressor and the water will generate some noise which is entirely normal.

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed shortens the drying time and saves energy.
2. For even drying result, sort the laundry according to fabric type and select the appropriate drying program.
3. Before drying, please close zips, hooks and eyelets, buttons, tie fabric belts, etc.
4. Remove all objects from pockets such as lighters and matches.
5. Remove underwiring from bras.
6. Close duvet covers and pillow cases to prevent small items from being rolled up inside them.
7. Leave jackets open and undo any long zips so that textiles dry evenly.
8. Do not over dry the clothes, because over dried clothes can easily get creases.
9. Do not dry the articles containing rubber or similar elastic materials.
10. Keep the area around the tumble dryer clean. Coal dust or flour may cause an explosion.
11. The door can be opened only after the program of the tumble dryer is finished to avoid being scalded by hot steam or hot drum.
12. Clean the door filter and the base filter and empty water container after each use to avoid extension of drying time and increase of energy consumption.
13. Do not dry clothes after dry-clean process.

OPERATION

■ Control Panel

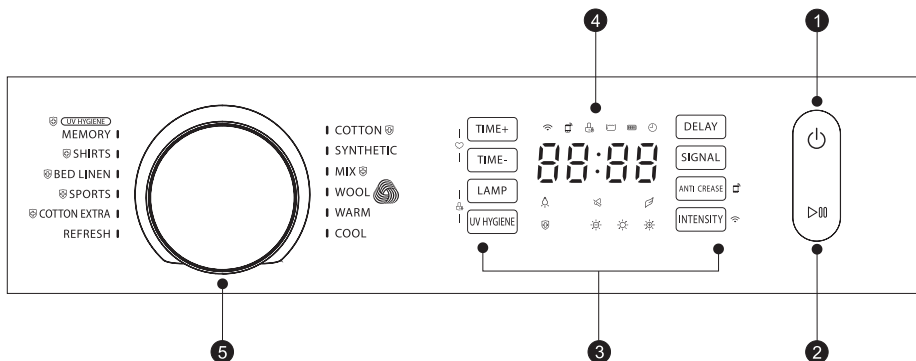

1 On/Off

Product is switched on or off.

2 Start/Pause

Press the button to start or pause the drying cycle.

3 Options

These buttons are used for setting additional functions.

4 Display

The display shows the setting, estimated program time remaining and status messages of your dryer.

5 Programs

Different drying cycles can be selected according to the user's need and the type of laundry to be dried.

OPERATION

The reference weight of dry clothes (weight per item)

 Sweater (mixed 800g)	 Jacket (cotton 800g)	 Jeans (800g)	 Bath Towel (cotton 900g)
 Single bedsheet (cotton 600g)	 Work clothes (1120g)	 Pyjamas (200g)	 Shirt (cotton 300g)
 T-Shirt (cotton 180g)	 Underwear (cotton 70g)	 Socks (mixed-weave 50g)	

 Note!

- Do not put more load than rated.
- Do not dry dripping wet laundry. The dryer might get damaged.

Only dry laundry suitable for tumble drying. Regard the laundry care labels:

-  Suitable for tumble drying
-  Normal drying process : Dry under medium temperature.
-  Mild drying process: Dry under lower temparture.
-  Do not tumble dry: Articles unsuitable for drying in the tumble dryer.

OPERATION

■ Options



DELAY

This function is used for delaying the end of the drying program up to 24 hours. When the delayed program starts, the time starts to countdown on the display and the delay icon blinks.

1. Load your laundry and make sure the machine door is closed.
 2. Press the **【 ⏻ 】** button, then use the program selector knob to select the desired program.
 3. You can additionally select the **【 ANTI-CREASE 】** or **【 SIGNAL 】** functions according to your need.
 4. Press the **【 DELAY 】** button.
 5. Repeatedly press the **【 DELAY 】** button to select the desired delay time.
 6. After the **【 ▷00 】** button is pressed, the dryer will start running.
The drying procedure will be automatically completed when the delay time is over.
 7. If you press the **【 ▷00 】** button again, the delay function will be paused.
 8. If you want to cancel the “DELAY” function, please press the **【 ⏻ 】** button.
-



TIME+ / TIME-

When the **【 WARM 】** or **【 COOL 】** or **【 REFRESH 】** program is selected, the **【 TIME 】** button can be used to adjust the drying time in 10 min steps.



INTENSITY

You can adjust the dryness level of the laundry by pressing the **【 INTENSITY 】** button.

1. The intensity function can be activated only before the program starts.
 2. Press the **【 INTENSITY 】** button repeatedly to increase the drying grade.
 3. Except the **【 WOOL 】**, **【 WARM 】**, **【 COOL 】**, **【 REFRESH 】** and **【 COTTON EXTRA 】** programs, all the other programs can be adjusted with the **【 INTENSITY 】** function.
-



UV HYGIENE

After selecting the program, you can choose the **【 UV HYGIENE 】** function according to your needs. Press **【 UV HYGIENE 】** to select this function. Press it again to cancel. After selecting the **【 UV HYGIENE 】** function, germs are removed during the drying process, making the clothes cleaner and safer. Use this function with caution for light, thin or delicate laundry. Except the **【 WOOL 】**, **【 SYNTHETIC 】**, **【 WARM 】**, **【 COOL 】** and **【 REFRESH 】** programs, all the other programs have UV function activated.

OPERATION



LAMP

The drum light will stay on for 1 min when the button is pressed or 1 min when the door is open.



SIGNAL

Set the buzzer on or off. In default condition, the buzzer is on.

When the buzzer is on:

1. The dryer will affirm pressed function button by a sound.
 2. If the program knob is rotated during the dryer is running, the buzzer will remind the user that this is an invalid operation.
 3. When the drying program is done, the buzzer will beep.
-



ANTI-CREASE

At the end of the drying cycle, a 30 min anti-crease function is active as default setting. The time for the function can be adjusted to 30-60-90-120 min. This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. Except **【WOOL】** program, all the other programs have this function.



MEMORY

Used to define and save your favourite program, which is used frequently.

1. Select the desired program and other drying functions.
 2. Press **【TIME +】** and **【TIME -】** for 3 seconds until the beep sounds and the desired program has been saved.
 3. Turn the program selector to the **【MEMORY】** position, then you can start your favourite program. If you want to change the **【MEMORY】** settings, repeat the steps (1) and (2).
-



CHILD LOCK

This machine incorporates a special child safety lock, which can prevent children from pressing buttons or operating unintentionally.

1. Press the **【LAMP】** and **【UV HYGIENE】** buttons at the same time for 3 seconds to start child lock function.
 2. When child lock function is set, the display will show Child lock icon and all buttons are deactivated, except **【】** and **【LAMP】** buttons.
 3. To deactivate the child lock function, the **【LAMP】** and **【UV HYGIENE】** buttons shall be pressed at the same time for 3 seconds.
-

OPERATION



WIRELESS NETWORK

Press **【INTENSITY】** for 3 seconds to configure the network or reset the network.



REMOTE CONTROL

This is the switch of remote control. If you want to use your smartphone to control the machine remotely, you need to hold **【ANTI CREASE】** for 3 seconds.

Considering the safe operation of the machine, the smartphone remote control should meet the following conditions:

1. The appliance should connect to the internet;
2. The door of drum should be closed.

Remark:

- If the door is opened at anytime, the remote control function will be disabled.
 - The remote control function is turned off at the end of each cycle automatically. If you want to use remote control function again, you need turn it on again.
-

OPERATION

■ Display

	DELAY
	Clean filters (warning)
	Empty water container (warning)
	CHILD LOCK
	REMOTE CONTROL
	WIRELESS NETWORK
	ANTI CREASE
	SIGNAL
	LAMP
	UV HYGIENE
	Dryness level
	MEMORY
	Remaining Time indicator/Error message



The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled “hand wash” provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this machine. M2206.

OPERATION

■ Programs

Program selector

1. When the LED display screen brightens up, rotate the program knob to select the desired program.
2. Select the **【DELAY】**, **【TIME +】**, **【TIME -】**, **【INTENSITY】**, **【ANTI CREASE】**, **【SIGNAL】**, **【LAMP】** or **【UV HYGIENE】** functions for additional options.
3. Press the **【▶⏸】** button.
4. Press the **【🔌】** button after the program has completed.

Program start

The drum will rotate after the program starts. and the remaining program time will be displayed.

Program end

1. The drum will stop rotating after the program ends. The display will show "End", the dryer will start **【ANTI CREASE】** function if user does not take out the load. Please press **【🔌】** button after unloading the tumble dryer to cut off power and pull out the plug.

OPERATION

■ Instructions to Connection with the TSmartLife App

Before you start, make sure that:

1. Your smartphone is connected to home wireless network, and you know the network password.
2. Make sure you are near the home appliance.
3. The 2.4GHz band wireless signal is enabled on your wireless router.

Follow the below steps to enter the remote control state

Download the TSmartLife App

On an app market (Google Play Store, Apple App Store), search for "TSmartLife" and find the TSmartLife app. Download and install it on your phone. You can also download the app by scanning the QR code below.



Register and log in

Open the TSmartLife app, and create a new account to start (you can also register through a third-party account). If you already had an existing account, use the account to log in.



Connect your devices to TSmartLife

- 1: Please make sure your mobile phone is connected to wireless network. If not, go to Settings and turn on the wireless connection, select and connect to a wireless network. Also please turn on the Bluetooth on your phone. If not, go to Settings and turn it on.
- 2: Please power on your devices.
- 3: Open TSmartLife app on your phone.

OPERATION

4: If a message of "Smart devices discovered nearby" appears, click to add.



5: If no message appears, select " + " on the page and select your device in the list of nearby devices available. If your device is not listed, please add your device manually by the device category and device model.



6: Connect your device to wireless network according to the instructions on app. If the connection fails, please follow the instructions provided by the app to continue with the operation.



OPERATION

Wireless Network Status Light

	Slowly flashing	Waiting for connection
	Quickly flashing	Connecting
	Quickly flashing solid	Connected to your wireless router

Notes

- Make sure your devices are powered on.
- Keep your mobile phone close enough to your device when you are connecting network to your device.
- Connect your mobile phone to the wireless network at home, and make sure you know the password of the wireless network.
- Check if your router supports 2.4 Ghz wireless network band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
- The device cannot connect to the wireless network that requires authentication, and it usually appears in public area such as hotels, restaurants, etc. Please connect to a wireless network that does not require authentication.
- It is recommended to use a wireless network name that only contains letters and numbers. If your wireless network name contains special characters, please modify it in the router.
- Turn off the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting network to your devices.
- In the case that your device connected to wireless network before but it needs to reconnect, please click "+" on app Home page, and add your device again by the device category and model according to the instructions on app.

WIRELESS NETWORK INFORMATION

Working Frequency	2.4G
Extreme Temperature Range	-20°C~85°C
MAX RF Power Output	wireless network: E.I.R.P 18dBm BT: 8dBm

OPERATION

■ Drying Programs Table

Program	MAX Load	Application/Properties
MEMORY	—	Define and save your favourite program.
COTTON	10.0kg	For single or multi-layer cotton laundry .
SYNTHETIC	4.0kg	To dry thin synthetic textiles, which are not ironed, such as easy care shirts, baby clothes or socks.
MIX	4.0kg	For mixed fabrics from cotton and synthetics.
WOOL	1.0kg	For machine washable wool items .
WARM	—	For completing dryness of clothes when you feel unevenly dry and partially humid in the clothes.
COOL	—	For cooling down hot clothes which have been just dried.
REFRESH	1.0kg	To refresh clothes kept at closet for a long time or to remove odors. MIN 20 min to MAX 180 min (in 10 min steps).
COTTON EXTRA	10.0kg	For single or multi-layer cotton laundry to be dried completely,for direct storage.
SPORTS	3.0kg	To dry sportswear and thin fabrics from polyester, which are not ironed.
BED LINEN	5.0kg	To dry bed linen, bed sheets or other large items.
SHIRTS	1.0kg	For easy care laundry, such as shirts and blouses equipped with anti-crease function to minimize the ironing effort, place clothes loosely in the dryer. Once dried, remove quickly and hang them on a clothes hanger.

•Note for Test Institutes:

1. Cotton Extra test program in accordance with Regulation AS/NZS 2442.2 for energy labeling, measured in accordance with AS/NZS 2442.1 and suitable for drying normal cotton load at rated load capacity.



Program	DELAY	TIME+/-	INTENSITY	SIGNAL	UV HYGIENE	ANTI CREASE	LAMP
MEMORY	Y	N	Y	Y	Y	Y	Y
COTTON	Y	N	Y	Y	Y	Y	Y
SYNTHETIC	Y	N	Y	Y	N	Y	Y
MIX	Y	N	Y	Y	Y	Y	Y
WOOL	Y	N	N	Y	N	N	Y
WARM	Y	Y	N	Y	N	Y	Y
COOL	Y	Y	N	Y	N	Y	Y
REFRESH	Y	Y	N	Y	N	Y	Y
COTTON EXTRA	Y	N	N	Y	Y	Y	Y
SPORTS	Y	N	Y	Y	Y	Y	Y
BED LINEN	Y	N	Y	Y	Y	Y	Y
SHIRTS	Y	N	Y	Y	Y	Y	Y

MAINTENANCE

■ Cleaning and Care

Empty the water container

1. Pull out and hold the water container with two hands.
2. Tilt the water container, pour out the condensate water into the basin.
3. Install the water container.

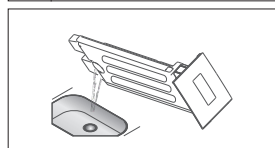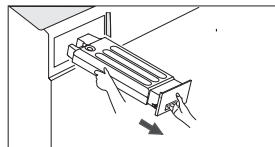

Warning!

- Empty the water container after each use. Once the water container is filled completely, the program will be paused and the "☒" icon will light. After the container is emptied, the dryer can be restarted by pressing **【Start/Pause】** button.
- Do not drink the condensate water.
- Do not use the dryer without the water container.



Clean the filters

This dryer has a primary door lint filter.
Make sure you clean the door filter after each cycle.



Note!

- To ensure the double-layer filter can be closed smoothly, the arrows at both ends need to be aligned, and the middle slot and the rib need to be aligned.

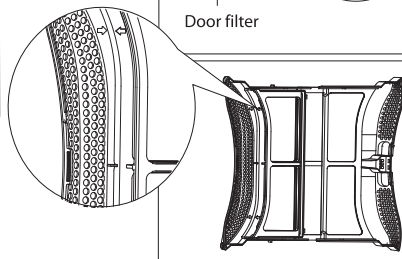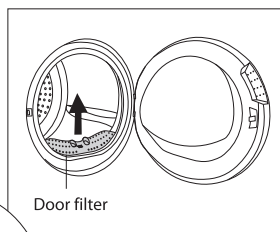

Clean the door filter

1. Open the door.
2. Take out the door filter.
3. Open the filter and remove the fluff on the filter screen, you can clean it in running water.
4. Dry the door filter thoroughly before installing it back.




Note!

- Take notice of the correct orientation before to insert the door filter.

MAINTENANCE

Clean the base filter

1. Open the cover.
2. Unlock three locking levers and grasp the filter handle.
3. Remove the base filter and clean it.
If there is too much lint on the filter, clean it in water. Dry the filter thoroughly before installing it back.
4. Clean the rubber sealing, both at the filter and handle.
5. Re-insert the filter.
6. Lock three locking levers and make sure that the levers are in the correct lock position.
7. Close the cover until there is a click sound.

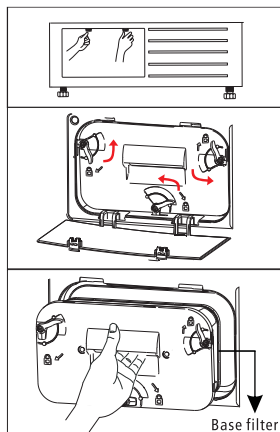

Note!


- The lint accumulated on the filter will block the air circulation. Not cleaning the filter regularly will increase drying time and energy consumption.
- Disconnect the power cord before cleaning!
- Do not operate the dryer without the filter!
- Clean the base filter every 3 operations to prevent lint accumulation inside the dryer.

Clean the heat exchanger

Warning!

- Do not touch the heat exchanger with your hand, which may cause an injury.

- As necessary, approximately once every 6 months, remove the lint from the heat exchanger using a vacuum cleaner with a dusting brush attached.
- Clean the heat exchanger without applying any pressure. Otherwise, the heat exchanger could be damaged. The dryer will not dry if the cooling fins are damaged or bent.

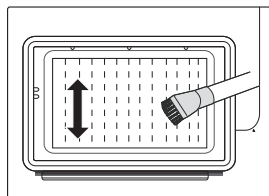


MAINTENANCE

Clean tumble dryer



Warning!

- Disconnect the power cord before cleaning!
- Clean the dryer with a wet cloth which is only damped by clean water.
- Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.

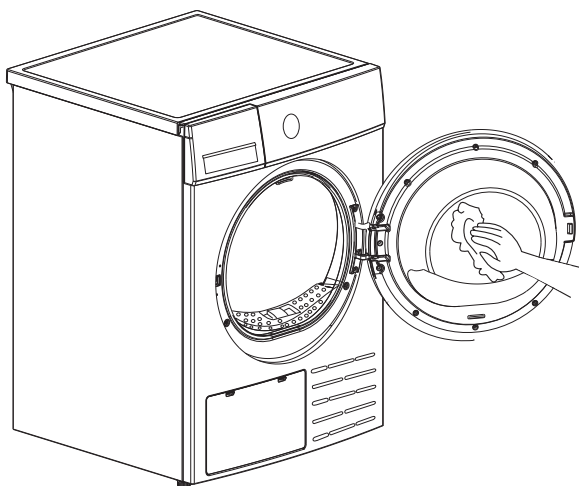

- Prepare a wet cloth damped by clean water.
- Clean the door, especially the inside window.
- Clean the sealing around the door opening.
- Clean the humidity sensor inside the drum.
- Take out all the filters, clean the sealing and air flow openings.
- Before starting the dryer, dry all parts with a soft cloth.

MAINTENANCE

■ Trouble Shooting

If you encounter an issue with the dryer, first check the table below and try to solve the issue before calling the service.

Problem	Solution
• Display is not on	• Check if the power supply works. • Check if power plug is inserted in wall outlet correctly. • Check if dryer is turned on.
• "☒" is lighting	• Check water container. If it is full of water, empty it.
• "☒" is lighting	• Clean the door filter and the base filter.
• Dryer does not start	• Check if the power supply works. • Check if power plug is inserted in wall outlet correctly. • Check if dryer is turned on. • Check if door is closed correctly. • Check if 【Start/Pause】 is pressed.
• Clothes are not dried or drying time is too long	• Clean the door filter and the base filter. • Clean the heat exchanger. • Empty the water container. • Clean the air inlet. • Check if installation place is proper.
• There are humming noises	• The compressor is operating. These noises are quite normal and do not indicate a fault.
• The dryer switches off at the end of the program	• The dryer switches off automatically after the end of operation. This is not an error but a normal function.



Warning!

If the issue continues after trying the solutions, turn off dryer and disconnect power plug, then call the service.

MAINTENANCE

Display	Reason	Solutions
"  "	Container is full	Empty the water container.
	Water pump failure or water level sensor failure	Pull out the plug from the outlet. Please contact your local service center if these problems occur.
"E33"	Temperature sensor error	
"E64"	BLDC motor communication error	
"E82"	PCB communication error	

 Warning!

- Only authorised technicians can carry out repairs.

MAINTENANCE

■ Technical Specifications

Parameter	Model
	TD-BP110GHAU(WS) TD-BP110GHAU(MG)
Dimension(W*D*H)	595*675*845(mm)
Ambient temperature	+2℃ ~ +35℃
Rated input power	750W
Rated voltage	220-240V~
Rated frequency	50Hz
Refrigerant	R134a
Weight of product	51kg
Rated capacity	10.0kg
GWP	1430
Tonne(s) of CO ₂ equivalent	0.39t
Quantity of refrigerant	270g

Contains fluorinated greenhouse gases covered by the Kyoto Protocol.
Hermetically sealed.

Note!

- The rated capacity is the maximum capacity to be dried at one time. Make sure that the dry clothes which are loaded into the appliance do not exceed the rated capacity.
- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and/or water container.

