



Choco Queen Bed Frame Black

PARTLIST


① Headboard 1pc




② Footboard 1pc




③ Support Leg x 2pcs




④ Side Rail x 2pcs

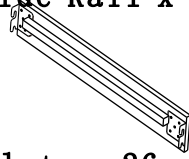

⑤ Centre Support Bar x 1pc

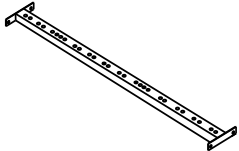


⑥ Slats x 26pcs



⑦ Double Plastic Cap x 13pcs



⑧ Single Plastic Cap x 26pcs





⑨ Leg x 4pcs



HARDWARE LIST


(A) Bolt M8 x 30mm x 16pcs (B) Nut M8 x 13mm x 4pcs




(C) Spring Washer x 8pcs (D) Flat Washer x 8pcs



(E) Allen Key M5 x 1pc (F) Spanner x 1pc




(G) Bolt M8 x 50mm x 4pcs





STEP 1


Bolt the bed legs onto the bottom of the head and foot ends using 60mm bolts

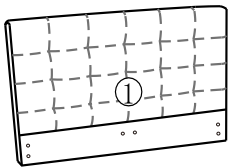

⑨




⑨




STEP 3

Fixing side rails and centre support bar to headboard and footboard.

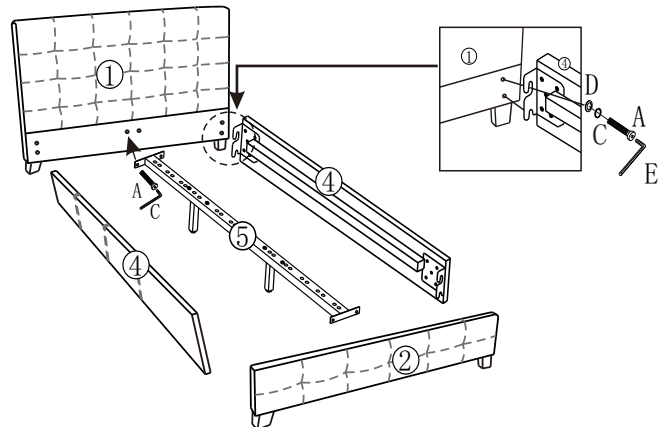


STEP 2

Bolt the centre rail in place using 4*30mm bolts and adjust the centre leg feet down to contact the floor.

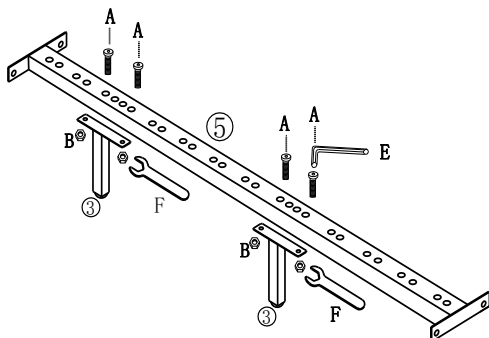

STEP 4

Fixing plastic caps and slats

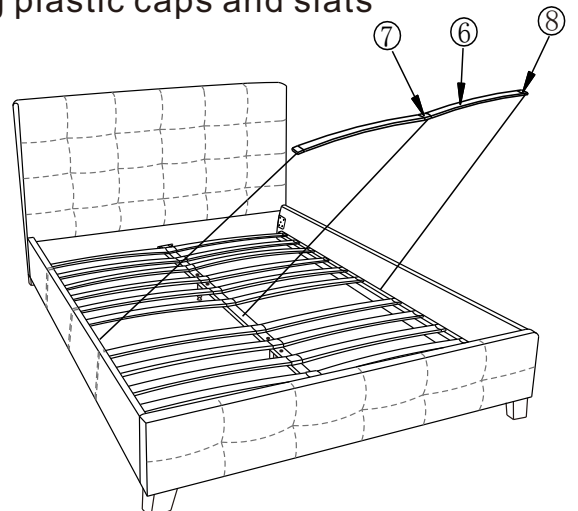

**IMPORTANT: NEVER DRAG THE ASSEMBLED BED.
TO MOVE, ALWAYS LIFT FROM BOTH SIDES.**