
PART	LIST
CODE	QTY
Α	1
В	1
C	1
D	1
Ε	1
F	1
G	1
Н	1
1	1
J	1
K	2
L	2
Μ	2 2 2
Ν	2

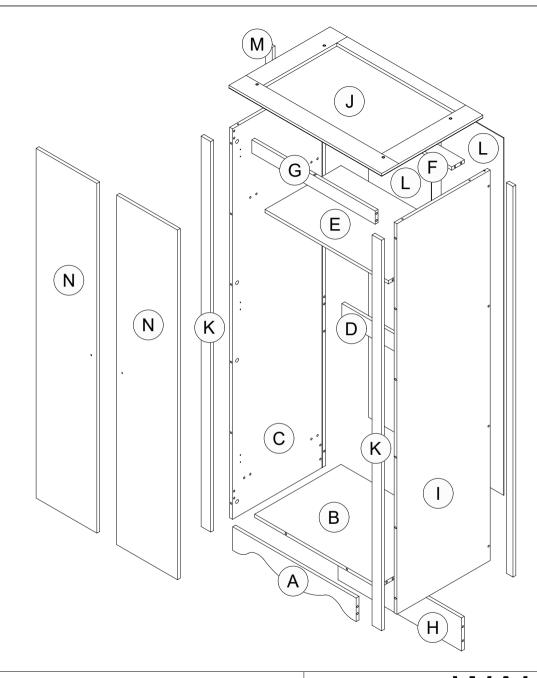

## **ASSEMBLY INSTRUCTIONS**

DO NOT FULLY TIGHTEN ANY BOLTS BEFORE ALL PARTS ARE LOOSELY ASSEMBLED. THE PRODUCT/FITTINGS MAY BE DAMAGED IF OVERTIGHTENED. BEWARE OF CROSS THREADING SCREWS AND BOLTS DURINGS ASSEMBLY. SMALL COMPONENT PARTS COULD CHOKE A CHILD IF SWALLOWED. WE STRONGLY RECOMMEND THAT YOU KEEP CHILDREN AWAY FROM THE WORK AREA.

WALDEN 2 DOORS WARDROBE

H	IARDV	VARE LIST	
1		Wood Dowel ∮8x30mm	29 pcs
2	0	Minifix Bolt	22 pcs
3		Minifix Cam	22 pcs
4		SV43 Bracket	2 pcs
5	<b>∮</b> ###	Screw ¢3.5x12mm	4 pcs
6		Hinges 7/8"	6 pcs
7	<b> </b>	Screw ¢3.5x16mm	36 pcs
8	920000000000000000000000000000000000000	Screw Ø6x45mm	12 pcs
9		Allen Key M4	1 pc
10	<i></i>	Screw \$4x30mm	2 pcs
11		PVH - 1586mm	1 pc
12	0	Nail	16 pcs
13		PVC Nail With Pin	4 pcs
14		192 Stub	4 pcs
15	<i> </i>	Screw Ø3.5x25mm	4 pcs
16		Oval Hanger Road - 640mm	1 pc
17	9.	Wooden Handle	2 pcs


Handle Screw  $\phi 4x25mm$ 


Minifix Cover Cap

2 pcs

6 pcs

Minifix Setup :			
	_		
(A) STEP 1			
UNLOCK STEP 2			
STEP 3			
LOCK			

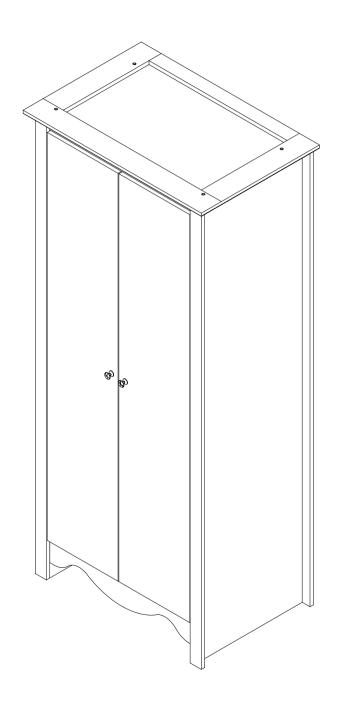

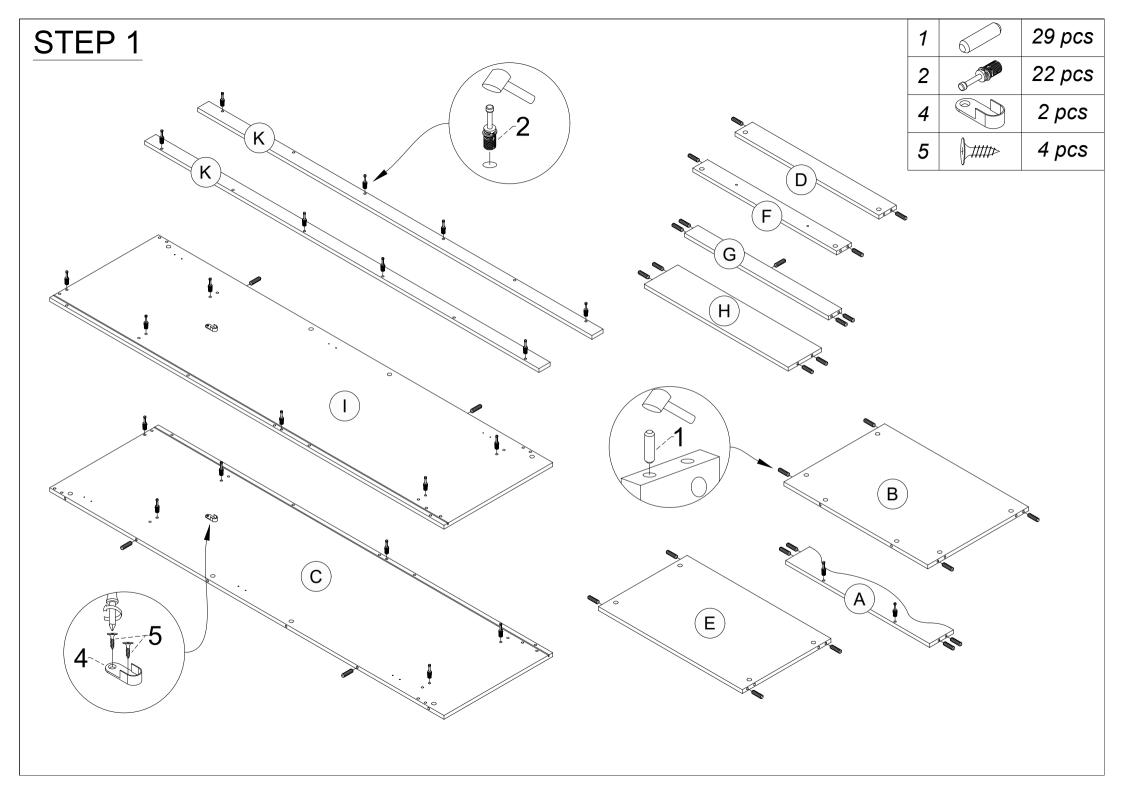

6 pcs 2 pcs STEP 2 6 STEP 3 3 12 pcs **JIIIII** PLEASE PUT ANOTHER **BOARD IN ORDER TO ALIGN** THE HINGES ACCORDINGLY.  $\bigcirc$ B NN

